

EG4[®] WALLMOUNT 314Ah ALL WEATHER BATTERY

USER MANUAL



©2026 EG4[®] ELECTRONICS, LLC. ALL RIGHTS RESERVED.
VERSION 1.0.3 | INFORMATION SUBJECT TO CHANGE WITHOUT NOTICE.
MODEL #: WM48314AWXX (XX is a number between 00 – 99)



TABLE OF CONTENTS

1.	LIST OF TABLES	1
2.	TABLE OF FIGURES	2
3.	CHANGELOG	4
4.	TECHNICAL SPECIFICATIONS.....	5
5.	WALLMOUNT 314AH ALL WEATHER DC ESS SPECIFICATIONS	3
6.	ABBREVIATIONS	8
7.	SAFETY.....	9
7.1	SYMBOLS USED IN MANUAL	9
7.2	SYMBOLS USED ON EQUIPMENT	9
7.3	SAFETY INSTRUCTIONS & NOTIFICATIONS.....	10
8.	SÉCURITÉ.....	12
8.1	SYMBOLES UTILISÉS DANS LE MANUEL	12
8.2	SYMBOLES UTILISÉS SUR L'ÉQUIPEMENT	12
8.3	CONSIGNES DE SÉCURITÉ ET AVIS.....	13
9.	PRODUCT OVERVIEW	19
9.1	BATTERY DIMENSIONS	21
9.2	PACKING LIST	21
9.3	BMS OVERVIEW	22
9.4	STORAGE INFORMATION	22
9.5	BATTERY PERFORMANCE CURVES	23
9.6	BATTERY CHARGING.....	24
9.7	FRONT PANEL INDICATOR LIGHTS.....	24
10.	GENERAL INSTALLATION.....	25
10.1	RECOMMENDED TOOLS	25
10.2	LOCATION REQUIREMENTS	26
10.3	BATTERY INSTALLATION.....	27
10.4	BATTERY WITH CONDUIT BOX.....	31
10.5	BATTERY, CONDUIT BOX, & 18KPV.....	33
10.6	BATTERY, CONDUIT BOX, & 12KPV/FLEXBOSS18/21.....	35
11.	CONNECTING MULTIPLE BATTERIES IN PARALLEL	37
11.1	BMS COMMUNICATION WIRING	37
11.2	BATTERY CABLE CONNECTIONS	40
12.	BATTERY COMMUNICATIONS.....	47
12.1	AUTO-ID BMS PROTOCOL FEATURE	47
12.2	BMS AUTO-ID PROCEDURE.....	48
12.3	COMMUNICATION CABLE PINOUT.....	48
13.	BATTERY STARTUP AND SHUTDOWN PROCEDURE.....	50
13.1	STARTUP	50
13.2	SHUTDOWN	50
14.	EMERGENCY STOP (RSD/ESS DISCONNECT).....	51
14.1	CABLING	51
15.	BMS TOOLS	52
15.1	OVERVIEW.....	52
15.2	DOWNLOADING AND INSTALLING BMS TOOLS	52
16.	TROUBLESHOOTING, MAINTENANCE & DISPOSAL.....	53
16.1	LED INDICATOR STATUS AND DEFINITION.....	53
16.2	MAINTENANCE.....	55

16.3	FIRMWARE UPDATE	55
16.4	BATTERY END OF LIFE.....	56
17.	WARRANTY INFORMATION	56

1. LIST OF TABLES

Table 5.1 – WallMount 314Ah All Weather DC ESS Specifications	3
Table 9.1 – Product Overview	19
Table 9.2 – Product Overview 2	20
Table 12.1 – Communication Cable Pinout	48
Table 16.1 – LED Indicator Status and Definition	53
Table 16.2 – Warning Definitions and Solutions	54
Table 16.3 – Fault Definitions and Solutions	54
Table 16.4 – Maintenance	55

2. TABLE OF FIGURES

Figure 9.1 - Product Overview.....	19
Figure 9.2 - Product Overview 2.....	20
Figure 9.3 - Battery Dimensions	21
Figure 9.4 - Packing List.....	21
Figure 9.5 - Battery Performance Curves.....	23
Figure 9.6 - LED Lights.....	24
Figure 10.1 - Recommended Tools.....	25
Figure 10.2 - Battery Installation Step 2.....	27
Figure 10.3 - Battery Installation Step 3.....	27
Figure 10.4 - Battery Installation Step 4.....	28
Figure 10.5 - Battery Installation Step 5.....	28
Figure 10.6 - Battery Installation Step 6.....	29
Figure 10.7 - Battery Installation Step 7	29
Figure 10.8 - Battery Installation Step 8.....	30
Figure 10.9 - Battery with Conduit Box Step 1.....	31
Figure 10.10 - Battery with Conduit Box Step 2	31
Figure 10.11 - Battery with Conduit Box Step 3	32
Figure 10.12 - Battery with Conduit Box	32
Figure 10.13 - Battery, Conduit Box, & 18kPV Step 1, 2 & 3.....	33
Figure 10.14 - Battery, Conduit Box & 18kPV Step 4 & 5	34
Figure 10.15 - Battery, Conduit Box & 12kPV/FlexBOSS18/21.....	35
Figure 10.16 - Battery, Conduit Box, & 12kPV/FlexBOSS18/21 Step 4 & 5.....	36
Figure 11.1 - WallMount in Parallel	37
Figure 11.2 - WallMounts in Parallel x 3.....	38
Figure 11.3 - WallMounts in Parallel x 4.....	38
Figure 11.4 - WallMounts in Parallel x 5.....	39
Figure 11.5 - WallMounts in Parallel x 6.....	39
Figure 11.6 - [1] FlexBOSS21 with	40
Figure 11.7 - [1] FlexBOSS21 with [2] 314 All Weather	41
Figure 11.8 - [1] FlexBOSS21 with [3] 314 All Weather.....	41
Figure 11.9 - [1] FlexBOSS21 with [4] 314 All Weather	42
Figure 11.10 - [1] FlexBOSS21 with [5] 314 All Weather	42
Figure 11.11 - [1] FlexBOSS21 with [6] 314 All Weather	42
Figure 11.12 - [2] FlexBOSS21 with [2] 314 All Weather.....	43
Figure 11.13 - [2] FlexBOSS21 with [3] 314 All Weather	43
Figure 11.14 - [2] FlexBOSS21 with [4] 314 All Weather	44
Figure 11.15 - [2] FlexBOSS21 with [5] 314 All Weather.....	44
Figure 11.16 - [2] FlexBOSS21 with [6] 314 All Weather.....	44
Figure 11.17 - [3] FlexBOSS21 with [3] 314 All Weather.....	45
Figure 11.18 - [3] FlexBOSS21 with [4] 314 All Weather	45
Figure 11.19 - [3] FlexBOSS21 with [5] 314 All Weather	46
Figure 11.20 - [3] FlexBOSS21 with [6] 314 All Weather	46
Figure 12.1 - Communication Cable Pinout.....	48

Figure 14.1 - Emergency Stop Cabling	51
--	----

3. CHANGELOG

Revision	Date	Description of change
Version 1.0	1-14-26	• Document published.
Version 1.0.1	2-17-26	• Updated the Product Overview callout image and table to clearly differentiate Degson terminals from stud terminals • Updated verbiage for readability • Updated section reference in section 6.7.
Version 1.0.2	4-20-26	• Corrected typo in the specifications sheet • Added Firmware Update to section 13.
Version 1.0.3	7-29-26	• Changed the location of the Changelog. • Added captions to all tables and added the list of tables. • Added captions to all figures and added the table of figures. • Updated the safety section. • Updated several section numbers.

4. TECHNICAL SPECIFICATIONS

TYPE & MODEL #		
PARAMETER		SPECIFICATION
PRODUCT TYPE		LFP Battery
BATTERY TYPE		Lithium Iron Phosphate (LiFePO4)
MODEL NUMBER		WM48314AWXX (XX is a number between 00 – 99)
ELECTRICAL CHARACTERISTICS		
NOMINAL ENERGY CAPACITY		16kWh
RECOMMENDED USABLE ENERGY (DOD%)		12.86kWh (80% recommended)
RECOMMENDED VOLTAGE RANGE		47.5 56 VDC
NOMINAL VOLTAGE		51.2 VDC
CAPACITY		314Ah
CHARGING VOLTAGE RANGE		56 – 57 VDC
DISCHARGING CUT-OFF VOLTAGE		44.8 VDC
MAX CONTINUOUS/RECOMMENDED CHARGE CURRENT		157A/157A
MAX CONTINUOUS/RECOMMENDED DISCHARGE CURRENT		200A/157A
CONTINUOUS CHARGE/DISCHARGE POWER		8/10.2 kW
RECOMMENDED CHARGING/DISCHARGING RATE		0.5C
SHORT CIRCUIT CURRENT		1700A, 15ms delay
PEAK POWER		12.8kW (3 sec)
ROUND-TRIP EFFICIENCY		95%
MAX PARALLEL UNITS		32
PROTECTION FEATURES		Over/Under Voltage, Over-Current, Short Circuit, High/Low Temp
BATTERY MANAGEMENT SYSTEM (BMS)		Integrated, Active Balancing
COMMUNICATION PROTOCOLS		RS485, CAN
BATTERY BREAKER		250A
BATTERY HEATER SPECIFICATIONS		
PARAMETER	SPEC	CONDITION
VOLTAGE	56V	-
POWER CONSUMPTION	448W	-
INTERNAL BATTERY TEMPERATURE	≤32°F (0°C)≥37°F (3°C)	Heat On/Heat Off
ENVIRONMENTAL SPECIFICATIONS		
STORAGE TEMPERATURE RANGE*		-4 – 131°F (-20 – 55°C)
HUMIDITY RANGE		5% – 95% RH (non-condensing)
ALTITUDE		9843 ft. (<3000 m)
COOLING METHOD		Natural Convection
DIMENSIONS (H × W × D)		34.6 in. × 21.7 in. × 9.3 in. (880 mm × 550 mm × 235 mm)
OPERATING TEMPERATURE RANGE		Charge: 32 – 122°F (0 – 50°C) Discharging: -4 – 131°F (-20 – 55°C)

*Less than 3 months of storage. If longer than 3 months, recommended storage temperature will be 59°F – 86°F (15°C - 30°C). Refer to section 9.4 for complete storage requirements.

MECHANICAL SPECIFICATIONS	
PARAMETER	SPECIFICATION
WEIGHT	309 lbs. (140 kg)
ENCLOSURE RATING	IP67
MOUNTING OPTIONS	Floor mount/wall attached
DISPLAY/INDICATORS	LED Status
CONNECTOR TYPE	Degson quick connector/screw terminal
CERTIFICATIONS & COMPLIANCE	
UL 1973	Yes
UL 9540	See https://eg4electronics.com/ for supported UL 9540 configurations
UL 9540A	Yes
WARRANTY & LIFECYCLE	
CYCLE LIFE [70% EOL CAPACITY]*	10000 cycles @ 0.5C, 25°C, 80% DOD
DESIGN LIFE	10 years
WARRANTY	10 years or 10000 cycles
LIFETIME PRODUCTION**	122.2 MWh
APPLICATION TYPE	Residential/Commercial/Off-grid/Backup

*EG4 recommends this value be set no lower than 20% to maintain the recommended 80% Depth of Discharge.

** $(51.2V \times 314Ah / 1000 \times 80\% \times 10000 / 1000) 95\% = 122.2 \text{ MWh}$ or
 $(12861 \text{ kWh} \times 10000 \text{ cycles} \times 95\% \text{ efficiency}) = 122.2 \text{ MWh}$

5. WALLMOUNT 314AH ALL WEATHER DC ESS SPECIFICATIONS

Table 5.1 – WallMount 314Ah All Weather DC ESS Specifications

MODEL	WM-48-314-IN-00 TO 99*	WM-48-314-3-IN- 00 TO 99*	WM-48-314-3-IN- 00 TO 99*	WM-48-314-4-IN- 00 TO 99*	WM-48-314-5-IN- 00 TO 99*	WM-48-314-6-IN- 00 TO 99*
BATTERY DATA						
BATTERY TYPE	LiFePO4					
TOTAL ENERGY	16kWh	32kWh	48kWh	64kWh	80kWh	96kWh
VOLTAGE RANGE	44.8 – 56 VDC					
NOMINAL VOLTAGE	51.2V					
MAX. CHARGE CURRENT	157A DC	314A DC	471A DC	628A DC	785A DC	942A DC
MAX. DISCHARGE CURRENT	200A DC	400A DC	600A DC	800A DC	1000A DC	1200A DC
PARALLEL NUMBER	1S1P	1S2P	1S3P	1S4P	1S5P	1S6P
SHORT CIRCUIT CURRENT RATING [SCCR] & DURATION	1700A, 15 ms delay	1950A, 15 ms delay	1950A, 15 ms delay	1950A, 15 ms delay	1950A, 15 ms delay	1950A, 15 ms delay
ENVIRONMENTAL SPECIFICATIONS						
OPERATING TEMPERATURE RANGE	Charge: 32 – 122°F (0 – 50°C) Discharging: -4 – 131°F (-20 – 55°C)					
INSTALL LOCATION	Battery IP67, Indoor and Outdoor Use					

6. ABBREVIATIONS

- AWG – American Wire Gauge
- A – Amps
- Ah – Amp hour(s)
- AC – Alternating Current
- AFCI – Arc-Fault Circuit Interrupter
- AHJ – Authority Having Jurisdiction
- kAIC – kilo-Amp Interrupting Capability
- ANSI – American National Standards Institute
- BAT – Battery
- BMS – Battery Management System
- COM – Communication
- CT – Current Transformer
- DC – Direct Current
- DIP – Dual In-line Package
- DOD – Depth of Discharge
- EG – Equipment Ground
- EGS – Equipment Grounding System
- EMC – Electromagnetic Compatibility
- EPS – Emergency Power System
- ESS – Energy Storage System
- E-Stop – Emergency Stop
- FCC – Federal Communication Commission
- GE – Grounding Electrode
- GEC – Grounding Electrode Conductor
- GFCI – Ground Fault Circuit Interrupter
- GFDI – Ground Fault Detector/Interrupter
- Imp – Maximum Power Point Current
- IEEE – Institute of Electrical and Electronic Engineers
- IP – Ingress Protection
- Isc – Short-Circuit Current
- In-lbs. – Inch Pounds
- kW – Kilowatt
- kWh – Kilowatt-hour
- LCD – Liquid Crystal Display
- LFP – Lithium Iron Phosphate
- L1 – Line 1
- L2 – Line 2
- mm – Millimeters
- MPPT – Maximum Power Point Tracking
- mV – Millivolt
- N – Neutral
- NEC – National Electric Code
- NEMA – National Electrical Manufacturers Association
- NFPA – National Fire Protection Association
- Nm – Newton Meters
- NOCT – Normal Operating Cell Temperature
- PC – Personal Computer
- PCB – Printed Circuit Board
- PE – Protective Earth
- PPE – Personal Protective Equipment
- PV – Photovoltaic
- RSD – Rapid Shut Down
- SCC – Standards Council of Canada
- SOC – State of Charge
- STC – Standard Testing Conditions
- UL – Underwriters Laboratories
- UPS – Uninterrupted Power Supply
- V – Volts
- VOC – Open-Circuit Voltage
- VMP – Voltage Maximum Power

7. SAFETY

7.1 SYMBOLS USED IN MANUAL



This type of notation indicates a severe hazard that presents an immediate risk of serious injury or death.



This type of notation indicates that a hazard may pose a risk to human health and safety



Use team lift whenever load weight, size, or center of gravity exceeds safe single-person handling limits. Coordinated lifting improves stability, control, and significantly reduces injury risk.



This type of notation indicates that the hazard could potentially damage the equipment.



This type of notation indicates that the information provided is important for the installation, operation, and/or maintenance of the equipment. Failure to follow the recommendations in such a notation could result in the equipment warranty being voided.



This type of notation indicates useful information.

7.2 SYMBOLS USED ON EQUIPMENT

	WARNING: Read the instructions before installation, operation, and maintenance of the system.
	WARNING: Read the instructions before installation, operation, and maintenance of the system.
	WARNING: Hazardous Voltage Circuits!

7.3 SAFETY INSTRUCTIONS & NOTIFICATIONS

EG4® inverters, batteries, and system components are designed and tested in strict adherence to international safety standards. Before beginning any work, carefully review all safety instructions and follow them throughout the handling of all system components. Installation should be performed only by qualified service personnel who must adhere to the guidelines provided and follow appropriate practices in accordance with local electrical, building, fire, and utility regulations. It is also essential to consult the local Authority Having Jurisdiction (AHJ) to obtain any necessary permits and approvals prior to installation.

Incorrect installation may cause:

- Injury or death to the installer, operator, or third party
- Damage to the inverter or other attached equipment



WARNING

All tasks related to this product, including system design, installation, operation, setup, configuration, and maintenance, must be performed by trained personnel. To prevent electric shock, avoid performing any maintenance beyond what is outlined in the operating instructions unless qualified to do so.



DANGER

Hazardous Voltage Circuits! There are various safety concerns that must be carefully observed before, during, and after installation, as well as during future operation and maintenance. The following are important safety notifications for the installer and any end users of this product under normal operating conditions.

Save these instructions. This manual contains instructions for the FlexBOSS18, the FlexBOSS21, and the WallMount 314Ah All Weather battery which shall be followed during the installation and maintenance of the inverter and battery.

1. **Beware of high PV voltage.** Install an external DC disconnect switch or breaker, making sure it is in the “off” or “open” position before installing or working on the inverter. Use a voltmeter to verify that no DC voltage is present to prevent electric shock.
2. **Beware of high grid voltage.** Confirm the AC switch and/or AC breaker are in the “off” or “open” position before installing or working on the inverter. Use a voltmeter to confirm that no voltage is present to prevent electric shock.
3. **Beware of high battery current.** Confirm the battery module breakers and/or on/off switches are in the “open” or “off” position before installing or working on the inverter. Use a voltmeter to confirm that no DC voltage is present to avoid electric shock.
4. **Do not open the inverter cable connection area while it is operating to avoid electric shock and damage from live voltage and current within the system.**
5. **Do not make any connections or disconnections (PV, battery, grid, communication, etc.) while the system is operating.** Damage to system components or risk of electric shock may occur if working with energized batteries.
6. **The system uses DC current.** DC current can lead to sustained muscle contractions, severe burns, or fire if mishandled during electric shock incidents.
7. **Do not disassemble the inverter or battery.** Contact the distributor for any issues requiring repair, for more information, and for proper handling instructions. Incorrect servicing or reassembly may pose a risk of electric shock or fire and void the warranty.
8. Ensure the PV, battery, and grid connections are secure and proper to prevent damage or injuries caused by improper installation.

9. Damage to the equipment or improper installation may cause arc flash, which can result in serious damage, injury, or death.
10. Make sure the inverter and battery are properly grounded.
11. Read all instructions before commencing installation. For electrical work, follow all local and national wiring standards, regulations, and these installation instructions. All wiring should comply with the National Electrical Code (NEC), ANSI/NFPA 70.
12. The inverter can connect to the utility grid only if the utility provider permits. Consult the local AHJ (Authority Having Jurisdiction) before installing this product to confirm any additional regulations or requirements for the immediate area.
13. All warning labels and nameplates on system components (inverters, batteries, etc.) must be clearly visible and must not be removed or covered.
14. The installer should consider the safety of future users when choosing the correct position and location of the inverter and battery, as specified in this manual.
15. Keep children from touching or misusing the inverter, battery, and relevant system components.
16. **Beware!** The inverter and other components of the system can get hot during use. Do not touch the inverter's surface or other components while the system is operating. During operation, only the LCD (if equipped) and buttons should be touched.
17. Rupture of the battery and shorting of battery cells can cause the release of toxic gases and harmful electrolyte solutions.
18. The installer must be adequately protected by wearing suitable, professional insulation gear, such as Personal Protective Equipment (PPE).
19. Some system components can be very heavy. Be sure to use team-lift and other safe lifting techniques throughout the installation.
20. Before installing, operating, or maintaining any components in the system, it is important to inspect all existing wiring to ensure it meets the appropriate specifications and operating conditions.



WARNING

Cancer and reproductive harm – See www.p65warnings.ca.gov for more details.

DISCLAIMER

EG4 reserves the right to make changes to the material herein at any time without notice.

Please refer to www.eg4electronics.com for the most updated version of our manuals/spec sheets.

8. SÉCURITÉ

8.1 SYMBOLES UTILISÉS DANS LE MANUEL



DANGER

Ce type de signalisation indique un danger grave présentant un risque immédiat de blessures graves, voire mortelles.



AVERTISSEMENT

Ce type de signalisation indique qu'un danger peut présenter un risque pour la santé et la sécurité humaines.



LEVAGE EN ÉQUIPE

Utilisez le levage à deux personnes lorsque le poids, les dimensions ou le centre de gravité de la charge dépassent les limites de manutention sécuritaire pour une seule personne. Un levage coordonné améliore la stabilité et le contrôle, et réduit considérablement les risques de blessure.



IMPORTANT

Ce type de notation indique que les informations fournies sont importantes pour l'installation, le fonctionnement et/ou l'entretien de l'équipement. Le non-respect des recommandations figurant dans cette notation pourrait entraîner l'annulation de la garantie de l'équipement.



RAPPEL

Ce type de notation indique des informations précédemment mentionnées qui doivent être prises en compte pour garantir un fonctionnement et une sécurité optimaux.



NOTE

Ce type de notation indique des informations utiles.

8.2 SYMBOLES UTILISÉS SUR L'ÉQUIPEMENT

	AVERTISSEMENT : Lisez les instructions avant l'installation, l'utilisation et l'entretien du système.
	AVERTISSEMENT : Lisez les instructions avant l'installation, l'utilisation et l'entretien du système.
	AVERTISSEMENT : Circuits à tension dangereuse.

8.3 CONSIGNES DE SÉCURITÉ ET AVIS

Les onduleurs, batteries et composants système EG4® sont conçus et testés en stricte conformité avec les normes de sécurité internationales. Avant toute intervention, veuillez lire attentivement toutes les consignes de sécurité et les respecter scrupuleusement lors de la manipulation du système. L'installation doit être effectuée uniquement par du personnel qualifié, qui doit respecter les directives fournies et appliquer les bonnes pratiques conformément aux réglementations locales en matière d'électricité, de construction, de sécurité incendie et de services publics. Il est également essentiel de consulter l'autorité compétente locale afin d'obtenir les permis et autorisations nécessaires avant l'installation.

Une installation incorrecte peut entraîner les effets suivants :

Blessure ou décès de l'installateur, de l'exploitant ou d'un tiers
Dommages à la batterie ou à tout autre équipement attaché



AVERTISSEMENT

Pour réduire le risque de blessure, lisez toutes les instructions! Toutes les tâches relatives à ce produit, y compris la conception du système, l'installation, le fonctionnement, la configuration et la maintenance, doivent être effectuées par du personnel qualifié. Afin de prévenir tout risque d'électrocution, il est impératif de ne procéder à aucune opération de maintenance autre que celles décrites dans le manuel d'utilisation, sauf si vous possédez les qualifications requises.



DANGER

Circuits à haute tension! Il existe diverses précautions de sécurité qui doivent être scrupuleusement respectées avant, pendant et après l'installation, ainsi que lors de l'utilisation et de la maintenance futures. Vous trouverez ci-dessous des consignes de sécurité importantes destinées à l'installateur et à tout utilisateur final de ce produit dans des conditions normales d'utilisation.

Conservez ces Instructions. Ce manuel contient des instructions importantes concernant les modèles FlexBOSS18, FlexBOSS21 et la batterie d'intérieur WallMount 314Ah, qui doivent être suivies lors de l'installation et de l'entretien de l'onduleur et de la batterie.

1. **Méfiez-vous des tensions photovoltaïques élevées.** Installez un sectionneur ou un disjoncteur CC externe et assurez-vous qu'il est en position « off » ou « open » avant d'installer ou de travailler sur l'onduleur. Utilisez un voltmètre pour vérifier l'absence de tension CC afin d'éviter tout risque d'électrocution.
2. **Méfiez-vous des tensions élevées du réseau.** Assurez-vous que l'interrupteur CA et/ou le disjoncteur CA sont en position « off » ou « open » avant d'installer ou de travailler sur l'onduleur. Utilisez un voltmètre pour vérifier qu'il n'y a pas de tension afin d'éviter tout risque d'électrocution.
3. **Méfiez-vous du courant élevé de la batterie.** Assurez-vous que les disjoncteurs du module de batterie et/ou les interrupteurs marche/arrêt sont en position « ouverte » ou « arrêt » avant d'installer ou de travailler sur l'onduleur. Utilisez un voltmètre pour vérifier qu'il n'y a pas de tension continue afin d'éviter tout risque d'électrocution.
4. **N'ouvrez pas la zone de connexion des câbles de l'onduleur pendant son fonctionnement afin d'éviter tout risque d'électrocution et tout dommage causé par la tension et le courant présents dans le système.**
5. **N'effectuez aucune connexion ou déconnexion (PV, batterie, réseau, communication, etc.) pendant que le système est en fonctionnement.** Des dommages aux composants du système ou un risque de choc électrique peuvent survenir si vous travaillez avec des batteries sous tension.

6. Le système utilise du courant continu. Le courant continu peut entraîner des contractions musculaires prolongées, des brûlures graves ou un incendie s'il est mal manipulé lors d'incidents de choc électrique.
7. Ne démontez pas l'onduleur ou la batterie. Contactez le distributeur pour tout problème nécessitant une réparation, pour plus d'informations et pour obtenir des instructions de manipulation appropriées. Un entretien ou un remontage incorrect peut présenter un risque d'électrocution ou d'incendie et annuler la garantie.
8. Assurez-vous que les connexions PV, batterie et réseau sont sécurisées et correctes afin d'éviter tout dommage ou blessure causé par une installation incorrecte.
9. Tout dommage causé à l'ESS ou toute installation incorrecte peut provoquer un arc électrique, pouvant entraîner des dommages graves, des blessures ou la mort.
10. Assurez-vous que l'onduleur et la batterie sont correctement mis à la terre.
11. Lisez toutes les instructions avant de commencer l'installation. Pour les travaux électriques, respectez toutes les normes et réglementations locales et nationales en matière de câblage, ainsi que les présentes instructions d'installation. Tout le câblage doit être conforme au Code national de l'électricité (NEC), ANSI/NFPA 70.
12. L'onduleur et le système ne peuvent être interconnectés avec le réseau électrique public que si le fournisseur d'électricité l'autorise. Consultez l'autorité compétente locale avant d'installer ce produit afin de confirmer toute réglementation ou exigence supplémentaire applicable à la zone immédiate.
13. Toutes les étiquettes d'avertissement et plaques signalétiques apposées sur les composants du système (onduleurs, batteries, etc.) doivent être clairement visibles et ne doivent pas être retirées ou recouvertes.
14. L'installateur doit tenir compte de la sécurité des futurs utilisateurs lorsqu'il choisit la position et l'emplacement corrects de l'onduleur et de la batterie, comme indiqué dans ce manuel.
15. Empêchez les enfants de toucher ou d'utiliser de manière abusive l'onduleur, la batterie et les composants du système concernés.
16. **Attention !** L'onduleur et certaines parties du système peuvent devenir chauds pendant leur utilisation. Ne touchez pas la surface de l'onduleur ni la plupart de ses composants lorsque le système est en marche. Pendant le fonctionnement, seuls l'écran LCD (si présent) et les boutons doivent être touchés.
17. La rupture de la batterie et le court-circuit des cellules de la batterie peuvent entraîner le dégagement de gaz toxiques et de solutions électrolytiques nocives.
18. L'installateur doit s'assurer qu'il est correctement protégé en portant un équipement d'isolation professionnel adapté, tel qu'un équipement de protection individuelle (EPI).
19. Certains composants du système peuvent être très lourds. Veillez à utiliser des techniques de levage en équipe et d'autres techniques de levage sécuritaires tout au long de l'installation.
20. Avant d'installer, d'utiliser ou d'entretenir tout composant du système, il est important d'inspecter tout le câblage existant afin de s'assurer qu'il répond aux spécifications et aux conditions de fonctionnement appropriées.



AVERTISSEMENT

Cancer et dommages reproductifs – Voir www.P654warnings.ca.gov pour plus de détails.

DISCLAIMER

EG4® se réserve le droit de modifier le contenu de ce document à tout moment sans préavis. Veuillez consulter www.eg4electronics.com pour la version la plus récente de nos manuels/fiches techniques.



TAKE THESE ADDITIONAL PRECAUTIONS DURING INSTALLATION/REPLACEMENT

Ensure that all precautions listed above have been taken prior to beginning the installation and observe these additional precautions during installation. Failure to take these precautions may result in serious injury or death:



- **Thermal Runaway:** *Immediately stop the installation, place battery in a safe state if possible, and move away from the battery if the battery:*
 - *begins to swell or bulge,*
 - *if you smell any unusual odors,*
 - *if you hear a hissing sound, or*
 - *if the battery begins to emit heat and/or smoke.*

Your battery may be experiencing thermal runaway, a dangerous condition that may cause fire or explosion. Contact local fire department, Chemtrec 800-262-8200, and EG4 support.



- **Electrical Shock:** *When installing/replacing the battery:*
 - *Ensure that the battery does not get wet.*
 - *Do not spray water or other liquids on the battery.*
 - *Do not perform the installation in conditions where dust, moisture, or other debris could enter the battery.*
 - *Avoid touching connections and components unless instructed to do so by this guide.*
 - *Do not leave the battery unattended during the installation without it being in a safe state. Do not touch, lean on, or lay tools on the battery or connections.*

If you are electrically shocked during installation, place battery in a safe state if possible, and seek immediate medical attention.



- **Ventilation Warning:** *When installing/replacing the battery:*
 - *Do not open the battery.*
 - *Do not attempt the installation/replacement if the battery is damaged.*

Lithium batteries may emit toxic gases when ruptured. Do not attempt to repair the battery in the case of rupture. Move outdoors in the case of rupture and seek professional assistance.



- **Electrolyte Exposure:** *When installing/replacing the battery:*
 - *Ensure that the battery is not damaged.*
 - *Do not attempt the installation/replacement if the battery is damaged.*

Lithium batteries contain a liquid electrolyte solution that is corrosive and damaging to skin and eyes. Exposure may occur in the case of damage to the battery. In the case of contact with skin or eyes, wash continuously with water for 15 minutes and seek immediate medical attention. Remove contaminated clothes immediately. In the case of ingestion, drink at least two glasses of water or milk, induce vomiting if unconscious, and seek immediate medical attention.

General Advice:

In all cases of exposure, seek medical attention if symptoms persist or if large amounts of electrolyte are involved. Show this safety information to the treating physician.

Skin Contact:

- Immediately remove contaminated clothing and shoes.
- Rinse affected skin thoroughly with plenty of water for at least 15 minutes.
- Seek medical attention if irritation persists or burns appear.
- Wash contaminated clothing before reusing.

Eye Contact:

- Immediately flush eyes with plenty of water for at least 15 minutes, keeping eyelids open.
- Remove contact lenses if present and easy to do.
- Seek immediate medical attention.

Inhalation (if applicable):

- Move the person to fresh air immediately.
- If breathing is difficult, provide oxygen. If not breathing, give artificial respiration.
- Seek immediate medical attention.

Ingestion:

- Do not induce vomiting.
- Rinse mouth with water.
- Give small amounts of water or milk to dilute, if the person is conscious and alert.
- Never give anything by mouth to an unconscious person.
- Seek immediate medical attention or contact Poison Control immediately.



PRENEZ CES PRÉCAUTIONS SUPPLÉMENTAIRES LORS DE L'INSTALLATION OU DU REMPLACEMENT

Assurez-vous que toutes les précautions énumérées ci-dessus ont été prises avant de commencer l'installation et respectez ces précautions supplémentaires pendant l'installation. Le non-respect de ces précautions peut entraîner des blessures graves ou la mort.



- **Emballlement thermique:** Arrêtez immédiatement l'installation, mettez la batterie dans un état sécuritaire si possible et éloignez-vous de la batterie si celle-ci :
 - commence à gonfler ou à se déformer,
 - dégage des odeurs inhabituelles,
 - émet un sifflement, ou
 - commence à dégager de la chaleur et/ou de la fumée.

La batterie peut être en situation d'emballement thermique, une condition dangereuse pouvant entraîner un incendie ou une explosion. Communiquez avec le service d'incendie local, Chemtrec au 800-262-8200, et le soutien EG4.



- **Choc électrique:** Lors de l'installation ou du remplacement de la batterie :
 - Assurez-vous que la batterie ne soit pas mouillée.
 - Ne vaporisez pas d'eau ni d'autres liquides sur la batterie.
 - N'effectuez pas l'installation dans des conditions où de la poussière, de l'humidité ou d'autres débris pourraient pénétrer dans la batterie.
 - Évitez de toucher les connexions et les composants sauf indication contraire dans ce guide.
 - Ne laissez pas la batterie sans surveillance pendant l'installation si elle n'est pas dans un état sécuritaire
 - Ne touchez pas la batterie, ne vous appuyez pas dessus et ne déposez pas d'outils sur la batterie ou les connexions.

En cas de choc électrique pendant l'installation, mettez la batterie dans un état sécuritaire si possible et consultez immédiatement un professionnel de la santé.



- **Avertissement – Ventilation:** Lors de l'installation ou du remplacement de la batterie :
 - N'ouvrez pas la batterie.
 - N'effectuez pas l'installation ou le remplacement si la batterie est endommagée.

Les batteries au lithium peuvent émettre des gaz toxiques en cas de rupture. N'essayez pas de réparer la batterie si elle est rompue. En cas de rupture, déplacez-vous à l'extérieur et demandez l'assistance d'un professionnel qualifié.



- **Exposition à l'électrolyte : Lors de l'installation ou du remplacement de la batterie :**
 - **Assurez-vous que la batterie n'est pas endommagée.**
 - **N'effectuez pas l'installation ou le remplacement si la batterie est endommagée.**

Les batteries au lithium contiennent une solution d'électrolyte liquide corrosive et nocive pour la peau et les yeux. Une exposition peut survenir si la batterie est endommagée. En cas de contact avec la peau ou les yeux, rincez abondamment à l'eau pendant 15 minutes et consultez immédiatement un professionnel de la santé. Retirez immédiatement les vêtements contaminés. En cas d'ingestion, buvez au moins deux verres d'eau ou de lait, provoquez le vomissement si la personne est consciente, et consultez immédiatement un professionnel de la santé.

Conseils généraux :

Dans tous les cas d'exposition, consultez un médecin si les symptômes persistent ou si de grandes quantités d'électrolytes sont impliquées. Montrez ces informations de sécurité au médecin traitant.

Contact avec la peau :

- Retirez immédiatement les vêtements et chaussures contaminés.
- Rincez abondamment la peau affectée à l'eau pendant au moins 15 minutes.
- Consultez un médecin si l'irritation persiste ou si des brûlures apparaissent.
- Laver les vêtements contaminés avant de les réutiliser.

Contact avec les yeux :

- Rincer immédiatement les yeux à grande eau pendant au moins 15 minutes, gardant les paupières ouvertes.
- Retirer les lentilles de contact si présentes et si cela est facile à faire.
- Consulter immédiatement un médecin.

Inhalation (le cas échéant) :

- Transporter immédiatement la personne à l'air frais.
- Si la respiration est difficile, administrer de l'oxygène. Si la personne ne respire pas, pratiquer la respiration artificielle.
- Consulter immédiatement un médecin

Ingestion :

- Ne pas faire vomir.
- Rincer la bouche à l'eau.
- Donner de petites quantités d'eau ou de lait pour diluer, si la personne est consciente et alerte.
- Ne jamais rien donner par voie orale à une personne inconsciente.
- Consultez immédiatement un médecin ou contactez immédiatement le centre antipoison.

9. PRODUCT OVERVIEW

The EG4® WallMount 314Ah All Weather Battery is designed for both indoor and outdoor low-voltage residential energy storage applications. It uses lithium iron phosphate (LiFePO₄) cells that deliver high safety performance and integrates an intelligent Battery Management System (BMS). The BMS continuously monitors and records each cell's voltage, current, and temperature in real time. It also provides active cell balancing, advanced battery control functions, and multiple built-in safety protections to confirm reliable and secure operation.

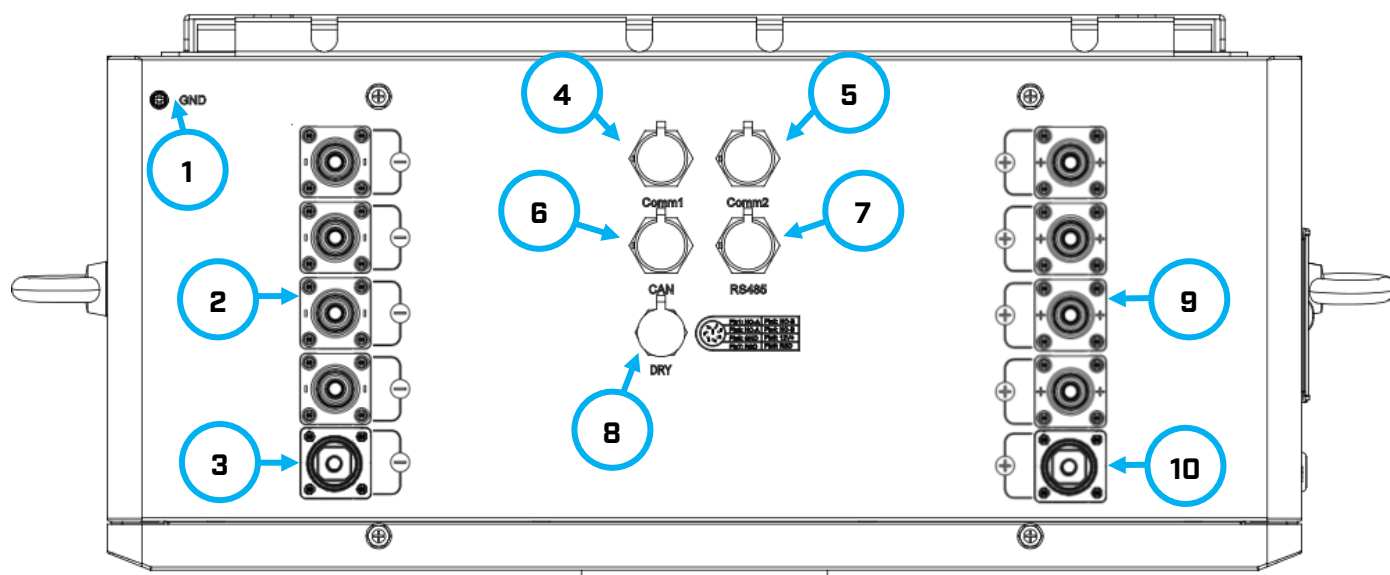


Figure 9.1 - Product Overview

Table 9.1 – Product Overview

NO.	ITEM	DESCRIPTION	REMARKS
1	GND	Equipment Grounding Conductor (EGC)	For grounding the battery
2	Terminal	Negative × 4	250A rated Degson battery connector
3	Terminal	Negative × 1	250A rated stud terminal
4	Battery Comm 1	Battery Communication Paralleling	For multiple batteries in parallel
5	Battery Comm 2	Battery Communication Paralleling	For multiple batteries in parallel
6	CAN	CAN Communication Interface	For inverter communications
7	RS485	RS485 Communication Interface	For inverter communications
8	Dry Contact	Normally Closed, Normally Open, Ground, RSD, 12V	For RSD control
9	Terminal	Positive × 4	250A rated Degson battery connector
10	Terminal	Positive × 1	250A rated stud terminal

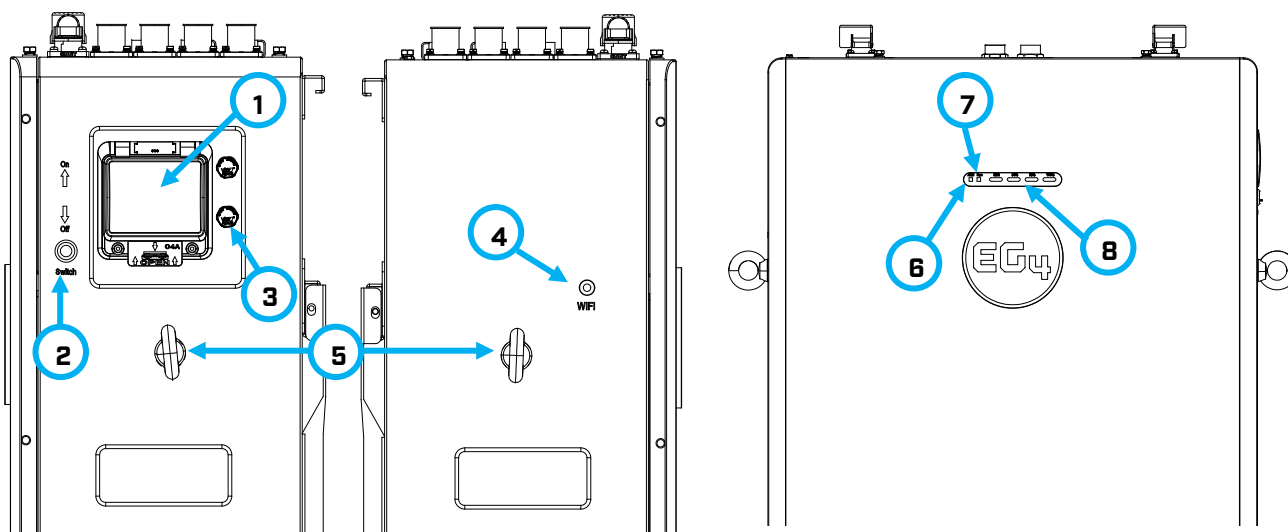


Figure 9.2 - Product Overview 2

Table 9.2 – Product Overview 2

NO.	ITEM	DESCRIPTION	REMARKS
1	Breaker Cover/Breaker	Output switch and over current protection	-
2	ON/OFF Switch	Turn BMS on/off	-
3	Ventilation Valve	Allows excess heat to escape	-
4	Wi-Fi/Bluetooth Antenna	Network connection	-
5	Lifting Eye Bolt	Threaded bolt with circular eye	For moving the battery
6	ALM	Alarm LED Display	To show alarm status
7	RUN	Run LED Display	To show normal operating status
8	SOC	State Of Charge Display	To show battery charge Each LED indicates ~25%

9.1 BATTERY DIMENSIONS

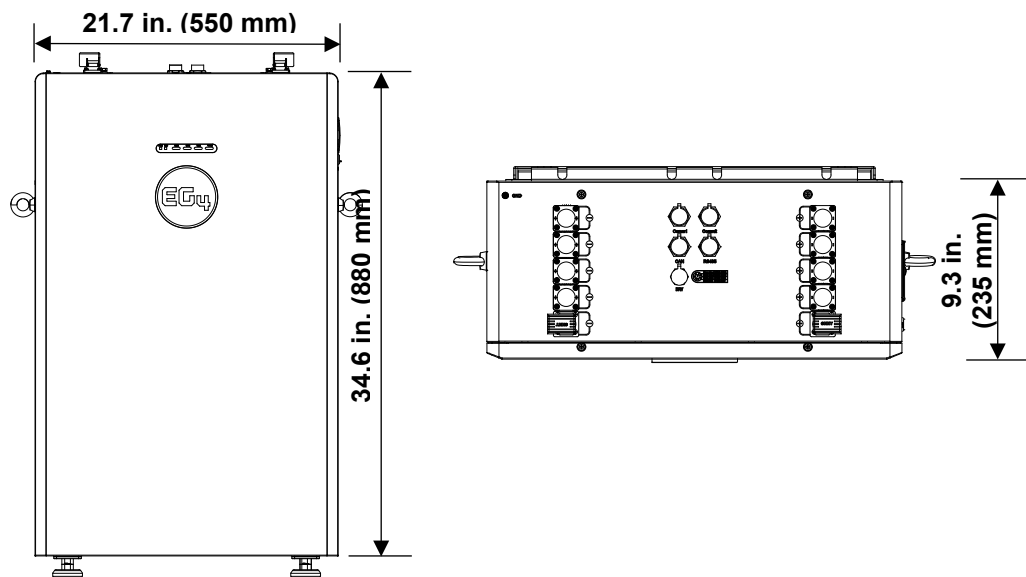


Figure 9.3 - Battery Dimensions

9.2 PACKING LIST

The items listed below will arrive with the product shipment:

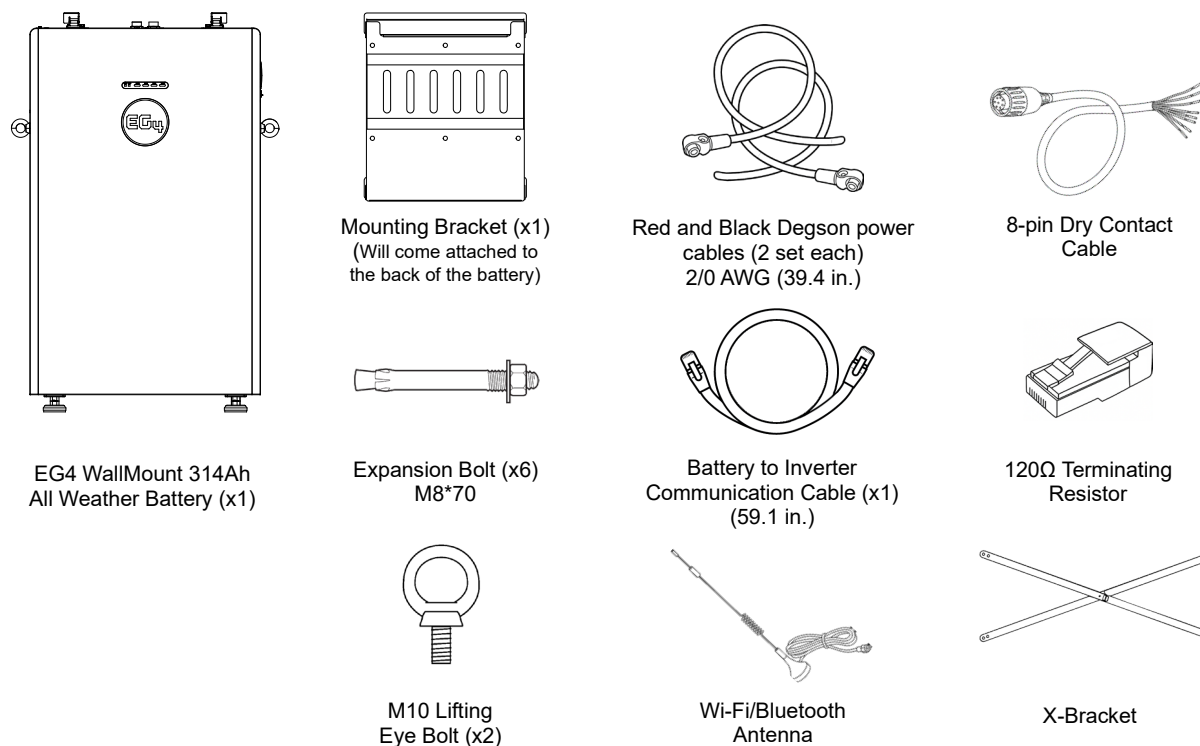


Figure 9.4 - Packing List



When installing or removing the battery, verify that the battery is powered off and use a multimeter to confirm there is no voltage present. This will prevent users from encountering live (powered) terminals by accident.

9.3 BMS OVERVIEW

The Battery Management System (BMS) protects the battery and its cells from conditions that could damage system components. It applies a 157A charge limit and a 200A discharge limit to help extend battery life and increase the number of usable life cycles. EG4® specifically configures each WallMount 314Ah All Weather Battery to deliver peak performance and reliable operation with compatible systems.

PCB TEMPERATURE PROTECTION

The BMS prevents the Printed Circuit Board (PCB) which houses most of the battery's control electronics from overheating. If the PCB temperature rises beyond safe limits, the BMS automatically shuts down the battery.

VOLTAGE PROTECTION

The BMS continuously monitors the voltage of each individual cell and prevents overcharging or undercharging.

ACTIVE CELL BALANCE PROTECTION

Cell balancing automatically keeps each individual cell within a specific voltage range relative to the others. This process optimizes battery performance and extends battery life without requiring any manual intervention.

ENVIRONMENTAL TEMPERATURE PROTECTION

Operating the battery outside the environmental temperature limits specified on the spec sheet can be dangerous and may cause permanent damage to the battery module and its components. To prevent this, the BMS continuously monitors battery temperature during charging and discharging and automatically shuts down the battery when temperatures exceed safe limits. Refer to Section 9.4 for more information.

CURRENT PROTECTION

The BMS continuously monitors charge and discharge current and includes built-in safeguards to prevent operation beyond specified limits. These safeguards include rapid shutdown timers for short circuits or extreme overcurrent conditions, as well as delayed shutdown for currents that slightly exceed the maximum rated capacity.

9.4 STORAGE INFORMATION

Follow these steps to store the batteries safely and prevent damage during storage.

BATTERY STATE

The battery's State of Charge (SOC) at the time of storage affects how long it retains its charge. EG4® recommends bringing each battery to a 20 – 50% SOC before placing it in storage. Lithium batteries naturally lose a portion of their charge over time, depending on storage duration and conditions. For best performance, EG4® recommends charging and discharging the batteries every three months.

ENVIRONMENTAL FACTORS


The battery storage location significantly affects battery health. For best results, store the battery at moderate temperatures between 32°F – 113°F (0°C – 45°C) for up to three months. For storage periods longer than three months, maintain a temperature range of 59°F – 86°F (15°C – 30°C).

If the cell remains in storage for more than six months, adjust its State of Charge (SOC) to 20 - 50% through a controlled charge and discharge process. Maintain storage humidity at or below 90% relative humidity (RH), and keep the storage temperature between 41°F – 77°F (5°C – 25°C).


Keep the battery away from areas where it may get wet or where humidity is high (≥90%). **Store the batteries away from all combustible materials.**

9.5 BATTERY PERFORMANCE CURVES


Charge & Discharge curve with 0.5C @ 25°C

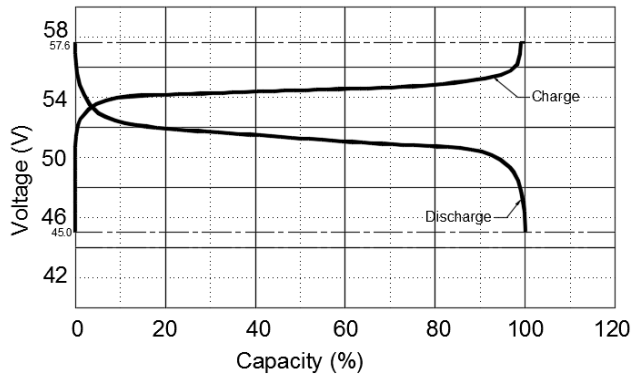


Discharge performance with different rate @ 25°C

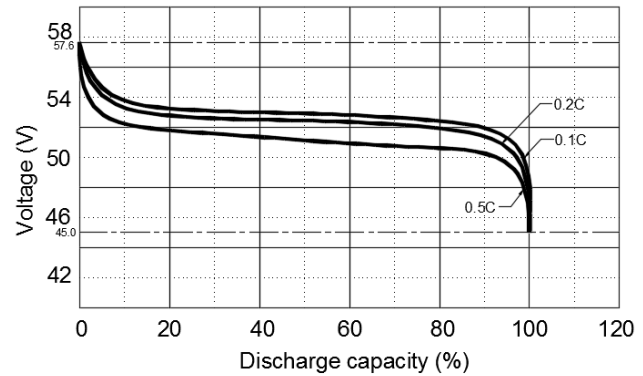

Discharge capacity with different temperature @ 0.5C

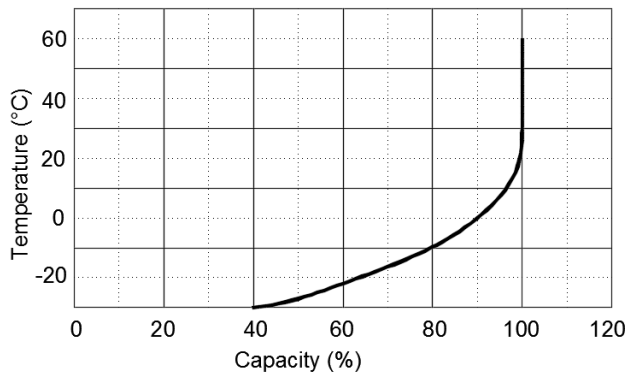

Cycle life with DOD @ 0.5C, 25°C

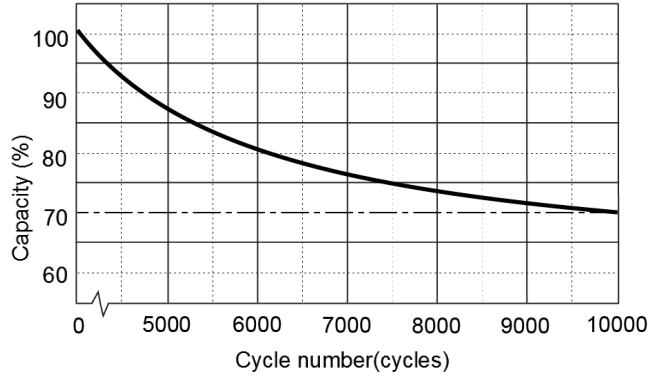

Self-discharge @ different temperature

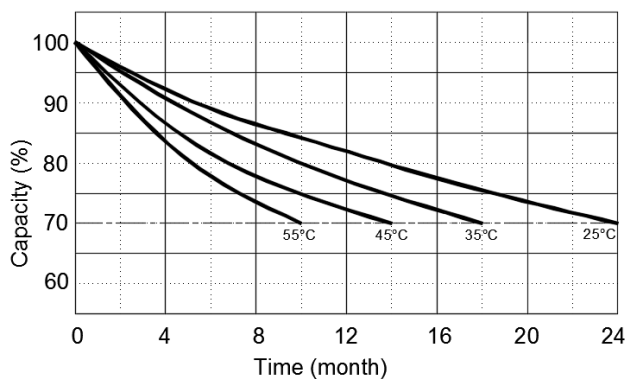


Figure 9.5 - Battery Performance Curves

9.6 BATTERY CHARGING

Set the correct parameters on the charge controller and/or inverter to prevent overcharging or damage to the battery module. (Refer to Section 4: Technical Specifications for the complete list of charging and discharging parameters.)

It is normal for EG4® WallMount 314Ah All Weather batteries with individual BMS units wired in parallel to display varying State of Charge (SOC) readings during charging or discharging. SOC variations of up to 10% are common. For more information on Battery State of Health (SOH) and Depth of Discharge (DoD), scan the QR code below:



This behavior does not indicate a problem or reduced module capacity. Small differences in wiring resistance, internal resistance, temperature, and individual cell characteristics cause slight SOC variations between batteries. These differences may cause one battery to carry more load or accept more charge for a short period. Over the course of a full charge or discharge cycle, the batteries naturally balance as the lagging battery assumes more load or charge later in the cycle, allowing the system to deliver the full rated kWh capacity. The voltage differences that develop as SOC levels diverge eventually drive the batteries to converge again during the cycle.



NOTE

When installing multiple batteries or adding a battery to an existing bank, confirm all batteries are charged to 100% before paralleling. This step is crucial to optimizing battery performance.

9.7 FRONT PANEL INDICATOR LIGHTS

The WallMount 314Ah All Weather Battery includes two status indicator LEDs and four State of Charge (SOC) indicator LEDs on the front panel. Their functions are described below:

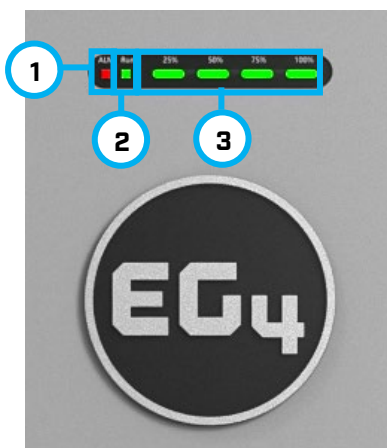


Figure 9.6 - LED Lights

1. **ALM** - The ALM light illuminates solid red when a fault occurs. Refer to Section 16 for details on specific faults and the required corrective actions.
2. **Run** - The RUN light displays a solid green color when the battery is idle. When the battery is charging or discharging, the RUN light blinks green.
3. **25%/50%/75%/100%** - The SOC indicator lights display the battery charge level in 25% increments. A red 25% light indicates 0 – 15% SOC, while a green 25% light indicates 16 – 25% SOC. A green 50% light, with all preceding lights illuminated green, indicates 26 – 50% SOC. A green 75% light, with all preceding lights illuminated green, indicates 51 – 75% SOC. A green 100% light, with all preceding lights illuminated green, indicates 76 – 100% SOC.



NOTE

See section 16.1 for full LED indicator status and definition.

10. GENERAL INSTALLATION

This section outlines the detailed steps for installing and configuring the battery. Follow each section in the order listed below for proper installation and setup.

INSTALLATION STEPS

- 10.1 Recommended Tools
- 10.2 Location Requirements
- 10.3 Battery Installation
- 10.4 Battery and Conduit Box
- 10.5 Battery and Conduit Box with EG4® 18kPV
- 10.6 Battery and Conduit Box with EG4® 12kPV/FlexBOSS18/21

10.1 RECOMMENDED TOOLS



Safety Goggles



Dielectric Shoes



Gloves



Multimeter



Phillips Head
Screwdriver




Socket Set



Electric Drill and
Drill Bits




Flathead
Screwdriver

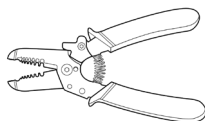

Wire Stripper



Level

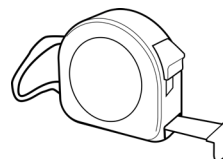

Tape Measure

Figure 10.1 - Recommended Tools

10.2 LOCATION REQUIREMENTS

Requirements for installation location:

- The EG4® WallMount 314Ah All Weather Battery is heavy. Use an equipment lift or a team-lift technique when moving the battery.
- The battery is designed for both indoor and outdoor installation. For indoor residential use, install the unit only in attached or detached garages, sheds, enclosed utility closets, basements, or other designated storage or utility spaces within the dwelling. Do not install the unit in habitable or living spaces, and do not install it in or near marine environments.
- Users may install the battery against a flat wall, but should not allow the wall to support the full weight of the unit. Use the pre-installed feet to confirm that part of the battery's weight rests on the ground.
- When installing the battery on flat ground, check for proper drainage around the installation area to reduce the risk of damage from flooding.
- Based on UL 9540A testing, the manufacturer recommends a minimum spacing of 4 inches between WallMount 314Ah All Weather batteries (see Intertek/ETL Test Report 250820046GZC-001). Before installation, consult the Authority Having Jurisdiction (AHJ) to determine whether reduced spacing is permitted. If reduced spacing is not allowed, follow all applicable state and local building and fire code spacing requirements.
- Confirm that the installation location maintains a minimum clearance of 23.6 in. (600 mm) from all exposures and egress points.
- Install the battery in an upright position.
- Consult applicable state and local building, fire, and installation codes to determine required smoke alarm provisions.



NOTICE

Provide a minimum installation space volume of 50 m³ when ventilation is not available. This volume keeps flammable gas concentrations below 25% of the Lower Flammable Limit (LFL) in the event of thermal runaway. The required room volume is based on the amount of gas released and the number of battery cells affected during testing. Adding additional EG4® WallMount 314Ah All Weather batteries does not require a larger installation space, as testing confirmed no thermal propagation between units. Users may reduce the required installation volume by providing adequate ventilation in accordance with applicable codes and jurisdictional requirements.



WARNING

Do not make any electrical connections until the battery is in its final location.



TEAM LIFT

The battery is very heavy. Use the team-lift technique during installation.

10.3 BATTERY INSTALLATION

Maintain a minimum clearance of 4 in. (101.6 mm) between batteries when installing them without a conduit box.



NOTE

When using an equipment lift to move the battery, secure the M10 lifting eye bolts (included with purchase) to both sides of the battery.

1. Remove the four set screws that secure the mounting bracket to the back of the battery, and set them aside.
2. Remove the mounting bracket from the battery and set it aside.

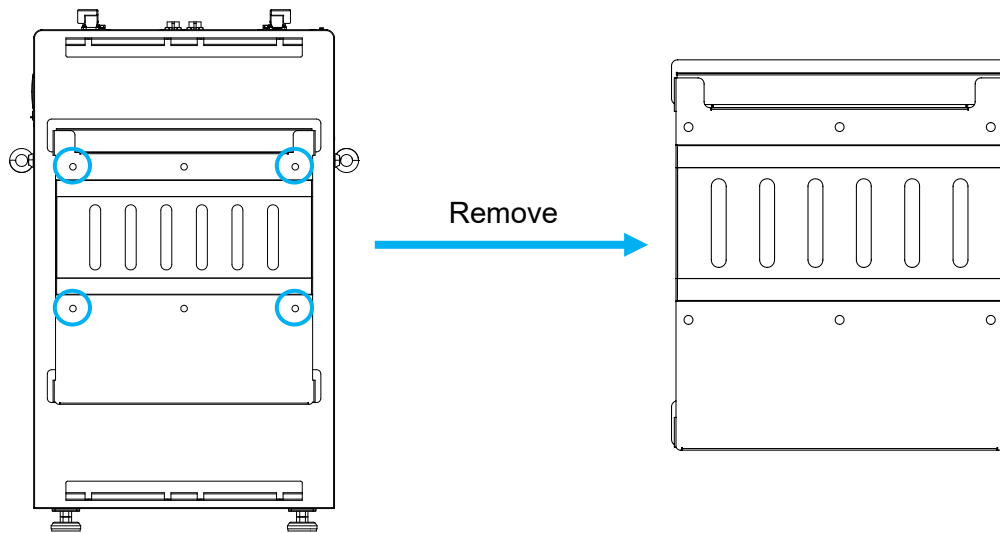


Figure 10.2 - Battery Installation Step 2

3. Position the top of the mounting bracket on the wall at the desired mounting height, maintaining a minimum clearance of 28.8 in (731.5 mm) from the ground.

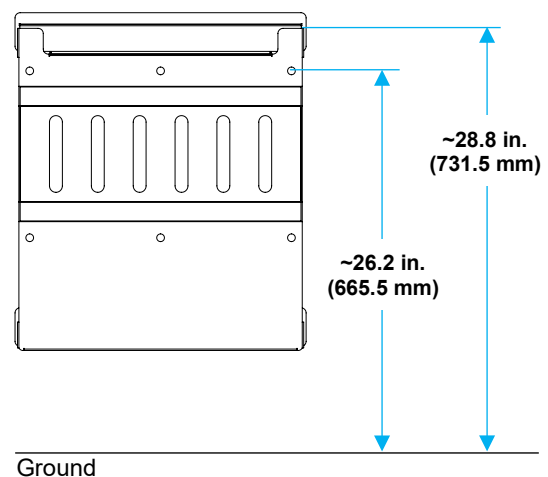


Figure 10.3 - Battery Installation Step 3

4. Use a level to align the bracket with the ground, then drill six holes to accommodate the mounting hardware.

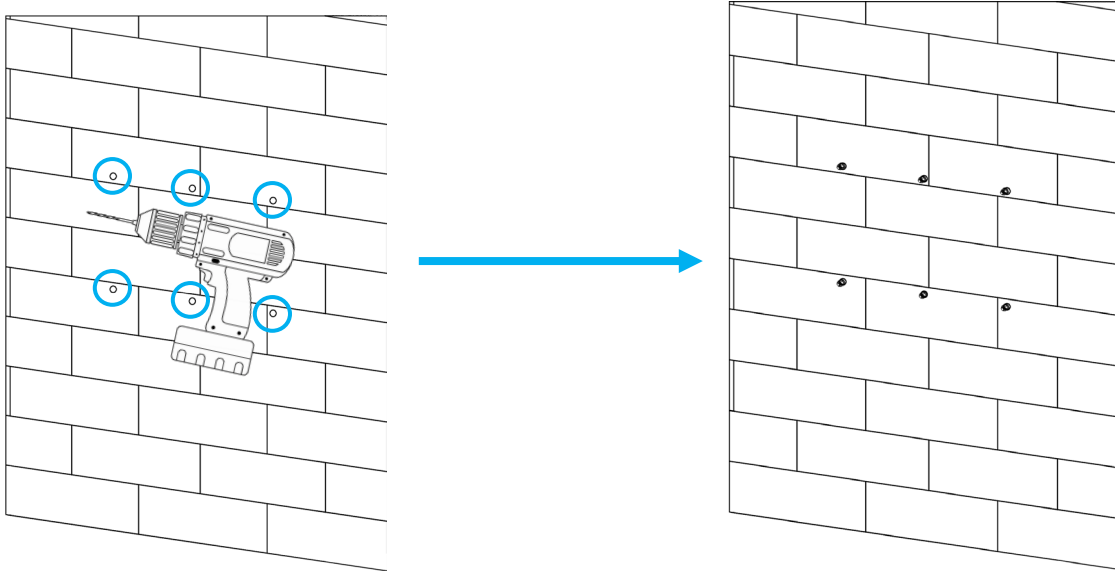


Figure 10.4 - Battery Installation Step 4

5. Secure the mounting bracket to the wall using hardware appropriate for the mounting surface. Use the included expansion bolts when mounting to concrete or brick.

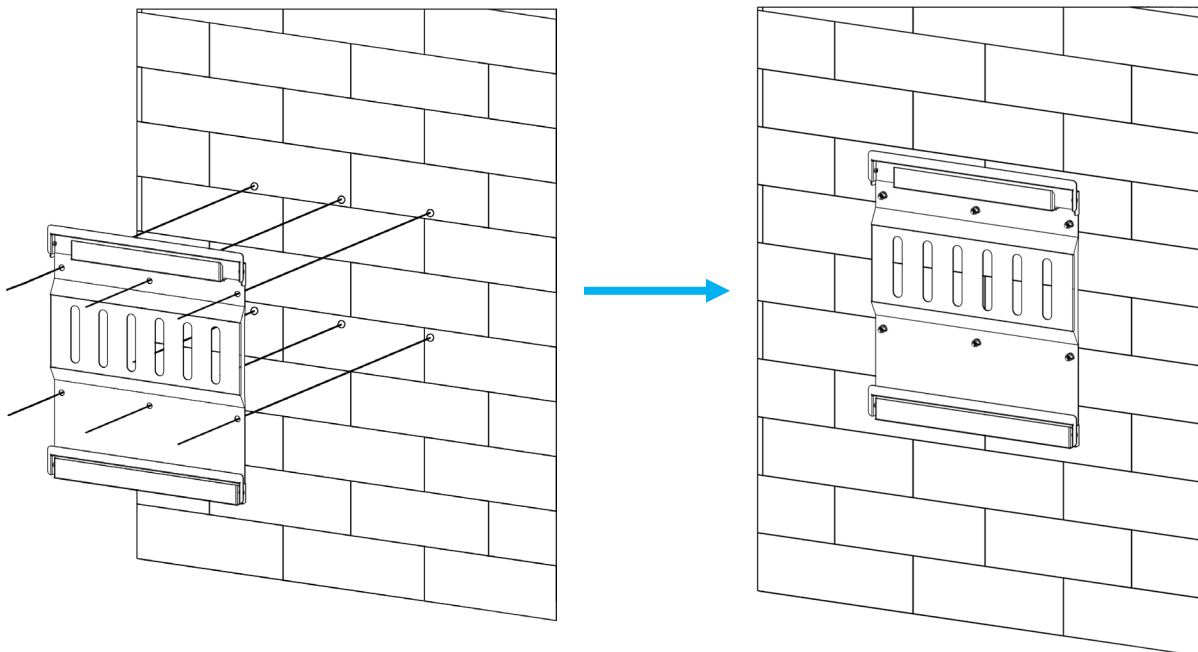


Figure 10.5 - Battery Installation Step 5

6. Attach the battery to the mounting bracket. Using a team-lift technique, lift the battery and hook the rear flange of the battery onto the front flange of the mounting bracket.

TEAM LIFT

The battery is very heavy. Use a team-lift technique to prevent injury to personnel or damage to equipment. The feet support the battery's weight, not the wall bracket, so verify that the feet rest firmly on the ground.

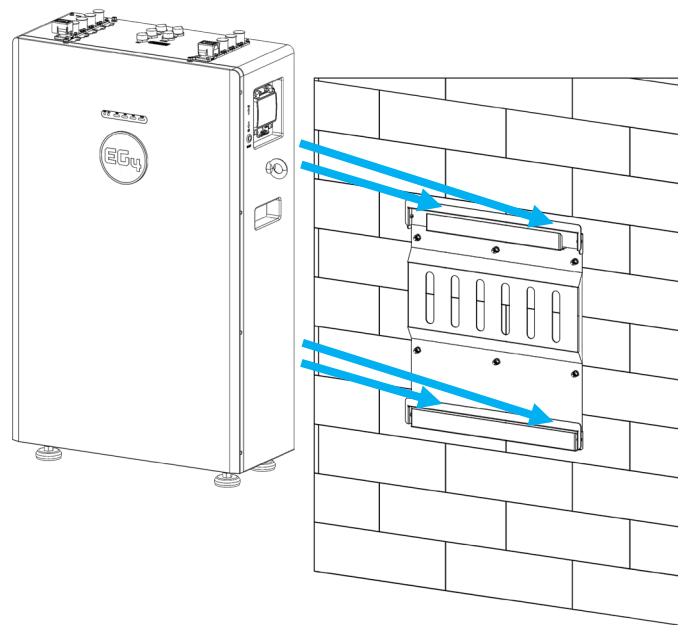


Figure 10.6 - Battery Installation Step 6

7. Secure the battery to the mounting bracket using the four side screws removed in Step 1.

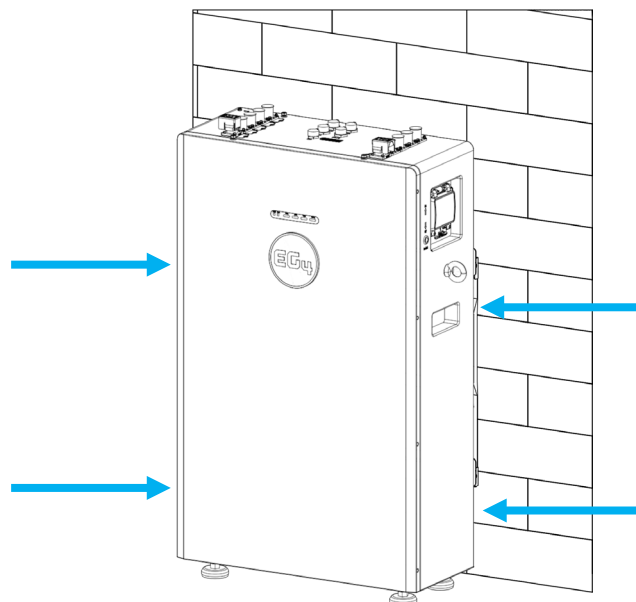


Figure 10.7 - Battery Installation Step 7

8. After securing the battery, attach the Wi-Fi/Bluetooth antenna to the left side of the battery.

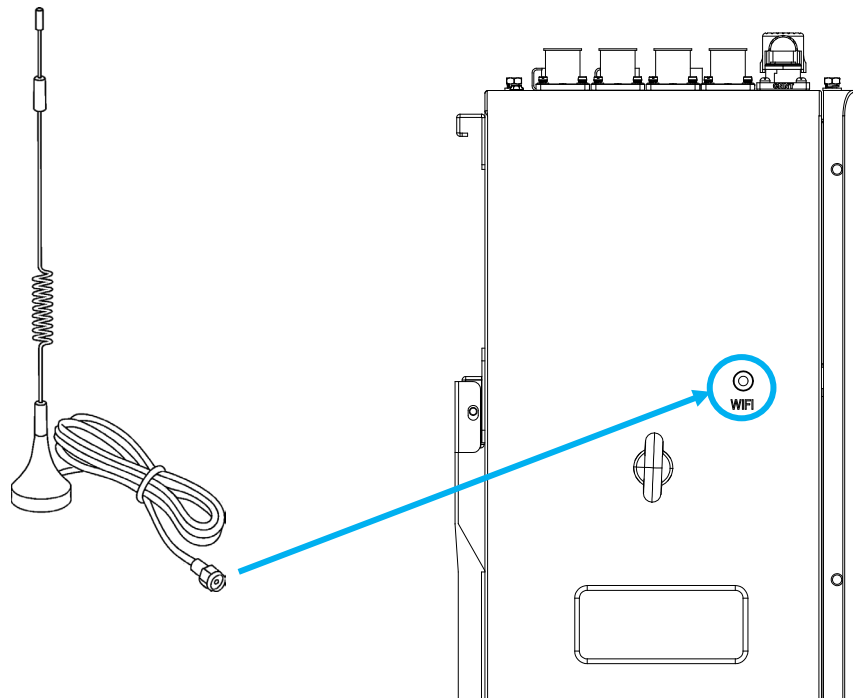


Figure 10.8 - Battery Installation Step 8

10.4 BATTERY WITH CONDUIT BOX

If users install the battery with the optional WallMount All Weather Conduit Box, follow the steps below, starting from Step 8 in the previous section. When using the EG4® WallMount All Weather conduit box, maintain a spacing of 5.35 in. (135.9 mm) between batteries.

1. Remove the four screws from the top of the battery, as shown in the image below, and retain them for use in Step 2.

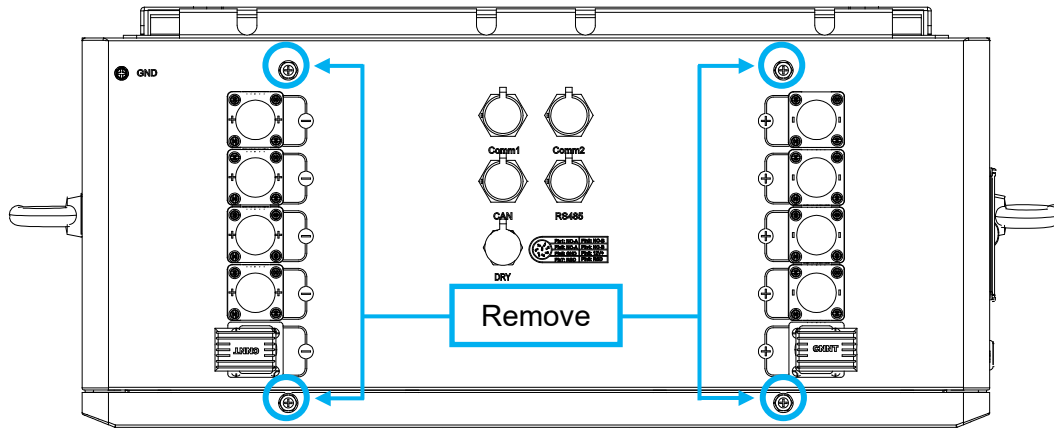


Figure 10.9 - Battery with Conduit Box Step 1



NOTE

Refer to the EG4® WallMount All Weather Conduit Box quick start guide at www.eg4electronics.com for assembly instructions or scan the QR code below.



2. Identify the four screw locations on the bottom of the WallMount All Weather Conduit Box that align with the screw holes on the top of the WallMount 314Ah All Weather battery. Place the conduit box on top of the battery and secure it using the screws removed in Step 1.

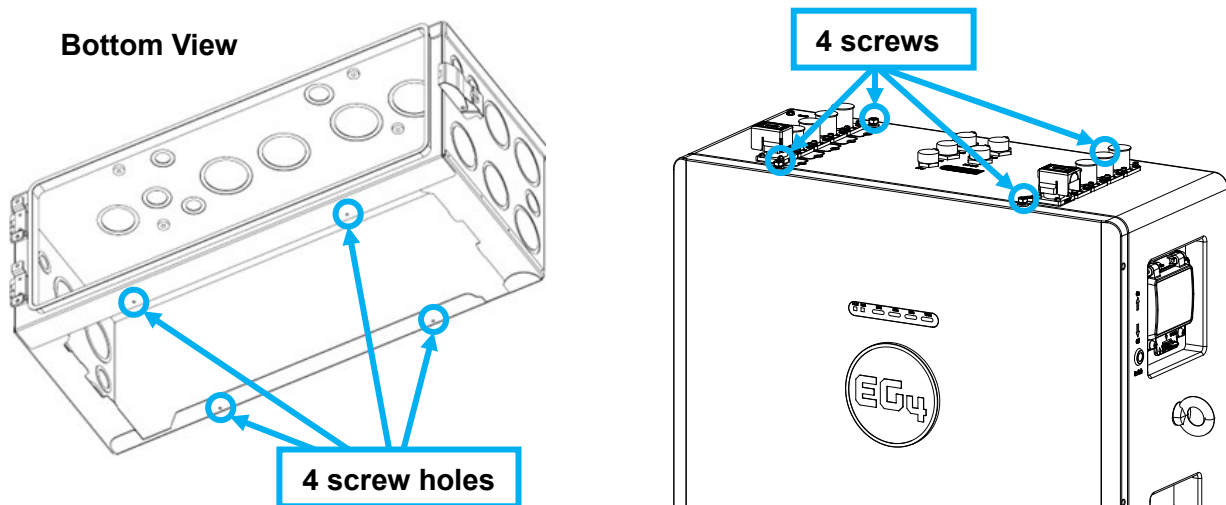


Figure 10.10 - Battery with Conduit Box Step 2

3. Attach the grounding conductor from the M6 grounding screw on top of the battery to the Equipment Grounding System to properly ground the battery.

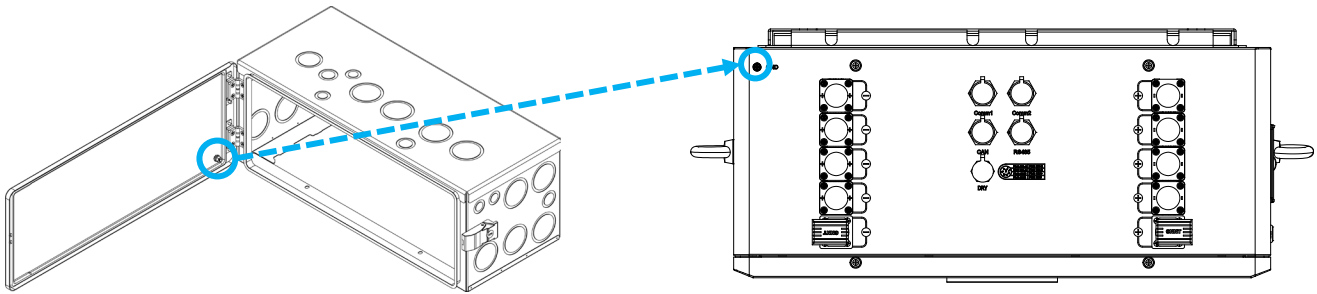


Figure 10.11 - Battery with Conduit Box Step 3

The image below represents a complete install:

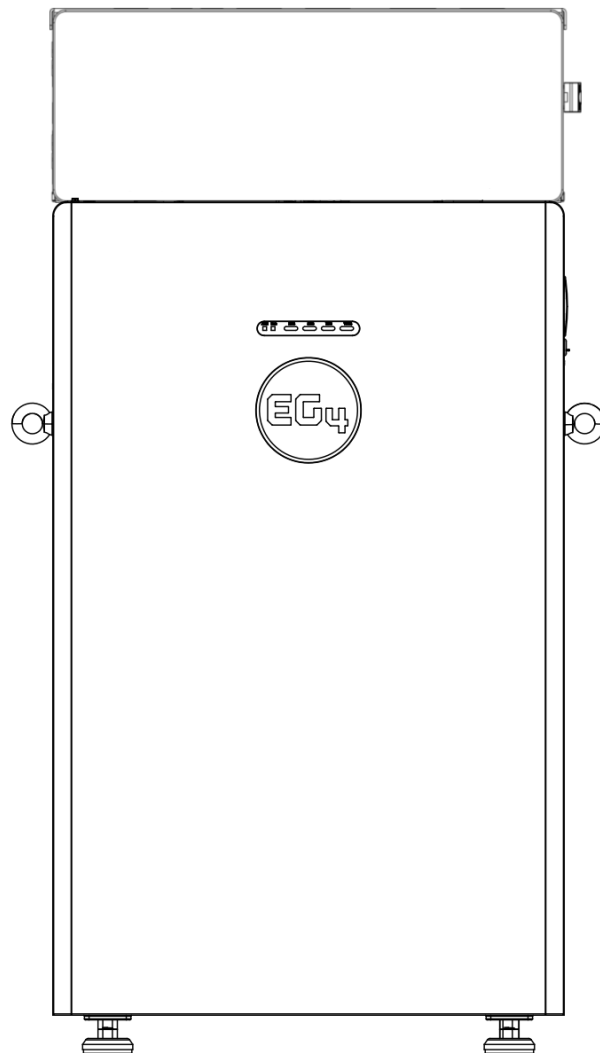


Figure 10.12 - Battery with Conduit Box

10.5 BATTERY, CONDUIT BOX, & 18KPV

After completing Step 3 in Section 10.4, follow the instructions below to install the system with an 18kPV inverter and the WallMount All Weather Conduit Box:

1. Align the included X-bracket with the drilled holes and mount both the battery bracket and the X-bracket to the wall, positioning the X-bracket against the wall.
2. Use the uppermost hole on the X-bracket to attach the inverter mounting bracket with hardware appropriate for the mounting surface. Refer to the inverter user manual for additional details.
3. Attach the battery to the mounting bracket. Use a team-lift technique to lift the battery and secure it onto the bracket flanges.
4. Attach the conduit box to the battery as described in Section 10.4.
5. Install the 18kPV onto the inverter mounting bracket (included with the inverter), align the inverter mounting holes with the conduit box, and secure the components together using the included hardware.
6. Properly ground the battery by attaching the grounding conductor from the conduit box to the M6 grounding screw on top of the battery.

Images for representative purposes only.

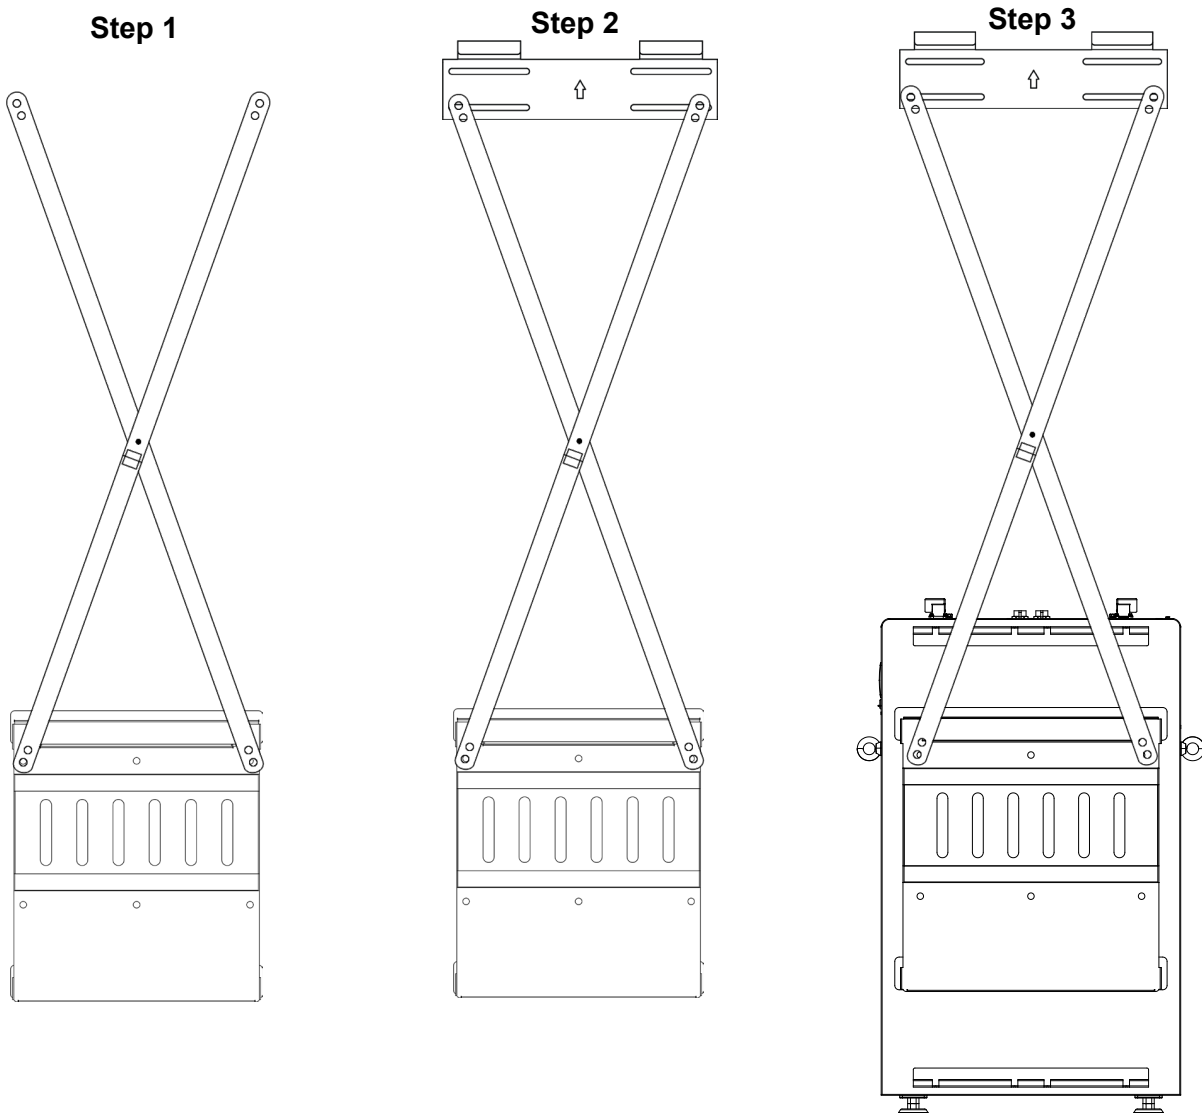


Figure 10.13 - Battery, Conduit Box, & 18kPV Step 1, 2 & 3

Images for representative purposes only.

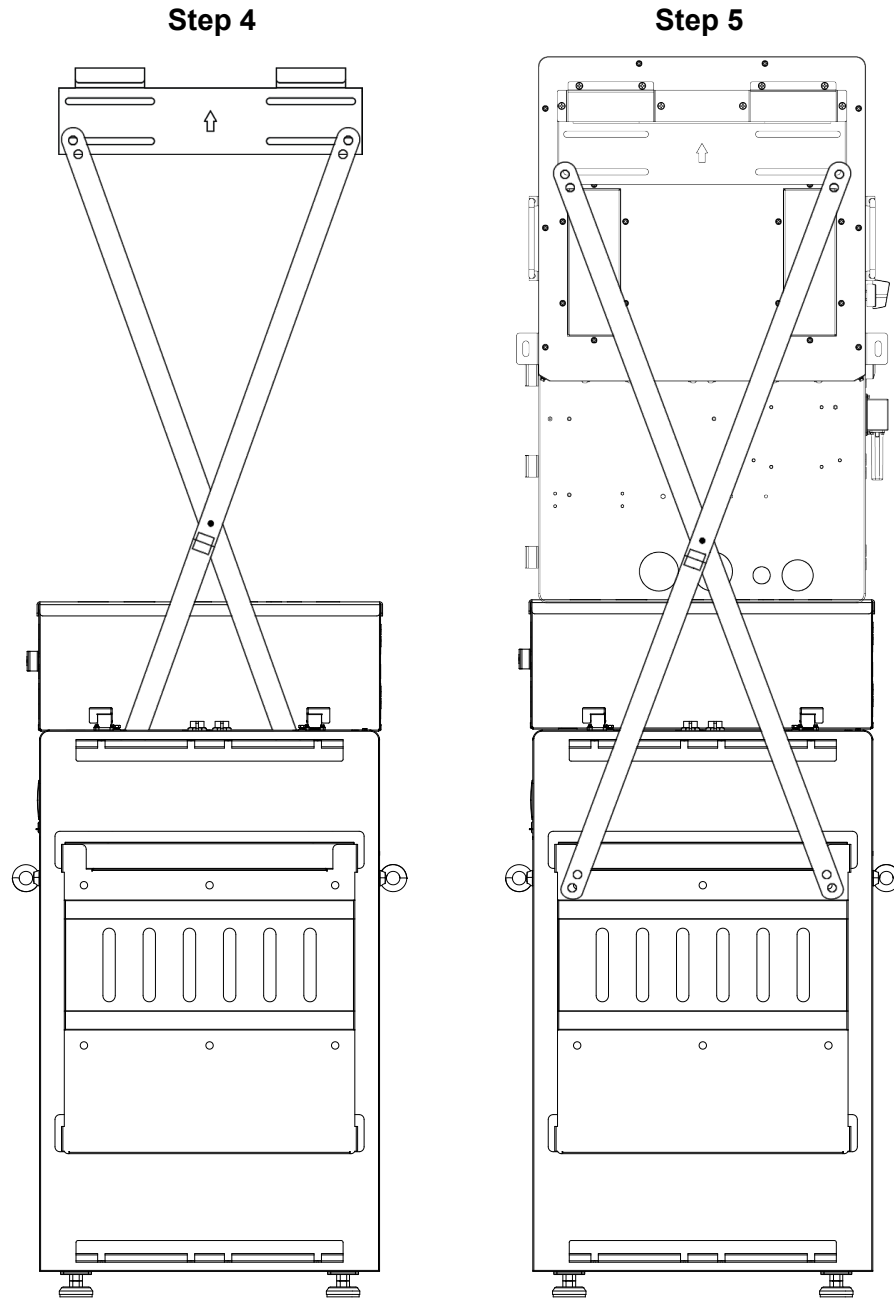


Figure 10.14 - Battery, Conduit Box & 18kPV Step 4 & 5

10.6 BATTERY, CONDUIT BOX, & 12KPV/FLEXBOSS18/21

After completing Step 3 in Section 10.4, follow the instructions below to install the system with a 12kPV, FlexBOSS18, or FlexBOSS21 inverter and the WallMount All Weather Conduit Box:

1. Align the included X-bracket with the drilled holes and mount both the battery bracket and the X-bracket to the wall, positioning the X-bracket against the wall.
2. Use the lowermost hole on the X-bracket to attach the inverter mounting bracket with hardware appropriate for the mounting surface. Refer to the inverter user manual for additional details.
3. Attach the battery to the mounting bracket. Use a team-lift technique to lift the battery and secure it onto the bracket flanges.
4. Attach the conduit box to the battery as described in Section 10.4.
5. Install the appropriate inverter onto the inverter mounting bracket (included with the inverter). Align the inverter mounting holes with the conduit box and secure the components together using the included hardware.
6. Properly ground the battery by attaching the grounding conductor from the conduit box to the M6 grounding screw on top of the battery.

Images for representative purposes only.

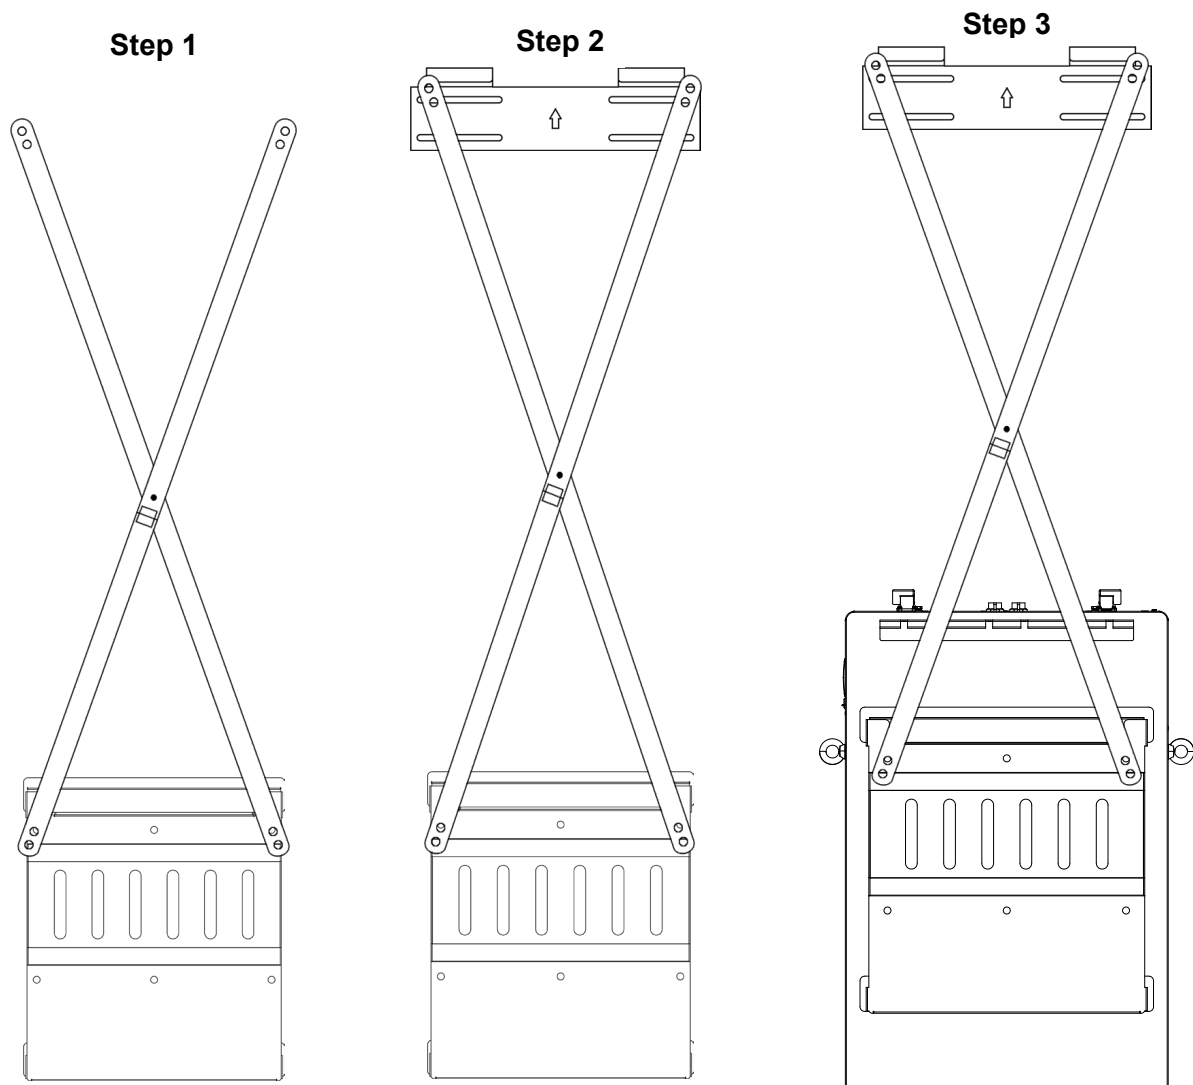


Figure 10.15 - Battery, Conduit Box & 12kPV/FlexBOSS18/21

Images for representative purposes only.

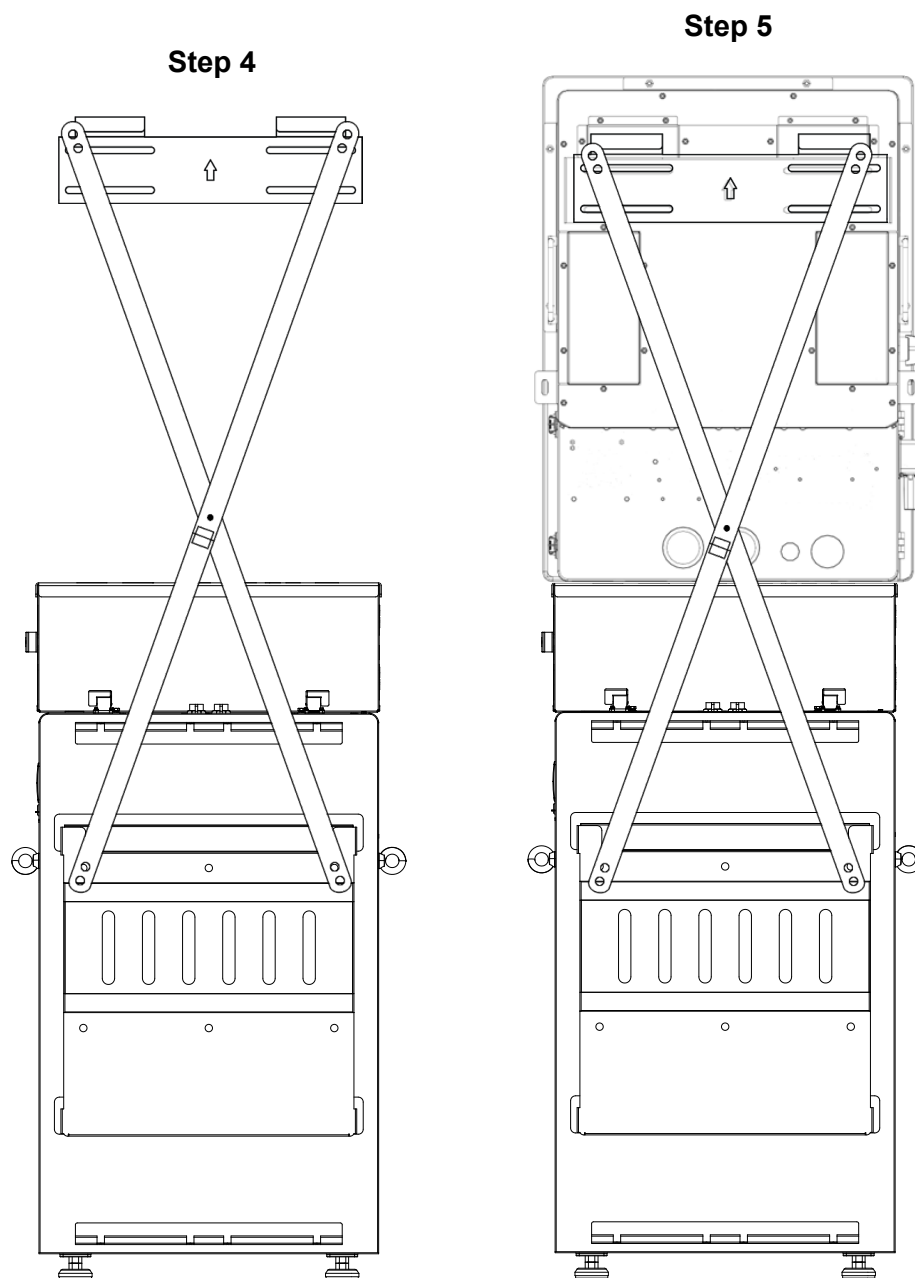


Figure 10.16 - Battery, Conduit Box, & 12kPV/FlexBOSS18/21 Step 4 & 5

11. CONNECTING MULTIPLE BATTERIES IN PARALLEL

When connecting multiple EG4® WallMount 314Ah All Weather batteries in parallel, purchase a paralleling kit from the distributor. Use the battery-to-battery communication cables included in the kit to interconnect and parallel the batteries.



NOTICE

The battery supports charging up to 157A and discharging up to 200A before the BMS shuts down the battery. Verify that the inverter is properly configured to maintain these charge and discharge limits. If users need to fabricate custom battery power cables, refer to an NEC approved ampacity chart.

11.1 BMS COMMUNICATION WIRING

The diagram below illustrates the battery communication cable wiring. Follow the guidelines listed below:

1. Starting at the last battery in the stack, use the included communication cables to connect the batteries in parallel. Plug the cable into the Comm 1 port on the last battery, then daisy chain to the Comm 2 port on the next battery. Repeat this process until the user reaches the master battery.
2. Based on whether the system uses CAN or RS485 communication, connect the battery to inverter communication cable to the CAN or RS485 port on the master battery, then connect the other end to the corresponding communication port on the inverter.
3. Install the included 120Ω terminating resistor into the Comm 1 port on the master battery to “close” the communication loop.
4. Install a second 120Ω terminating resistor into the “Comm 2” port on the last battery in the stack to “close” the communication loop.



NOTE

When using closed-loop communication, connect the 120Ω terminating resistor to the Comm 1 port on the master battery. Verify that the resistor is connected to the correct port, as connecting it to an incorrect port may damage the system and connected components.

For additional examples of paralleling batteries, refer to the example diagrams on the following page.

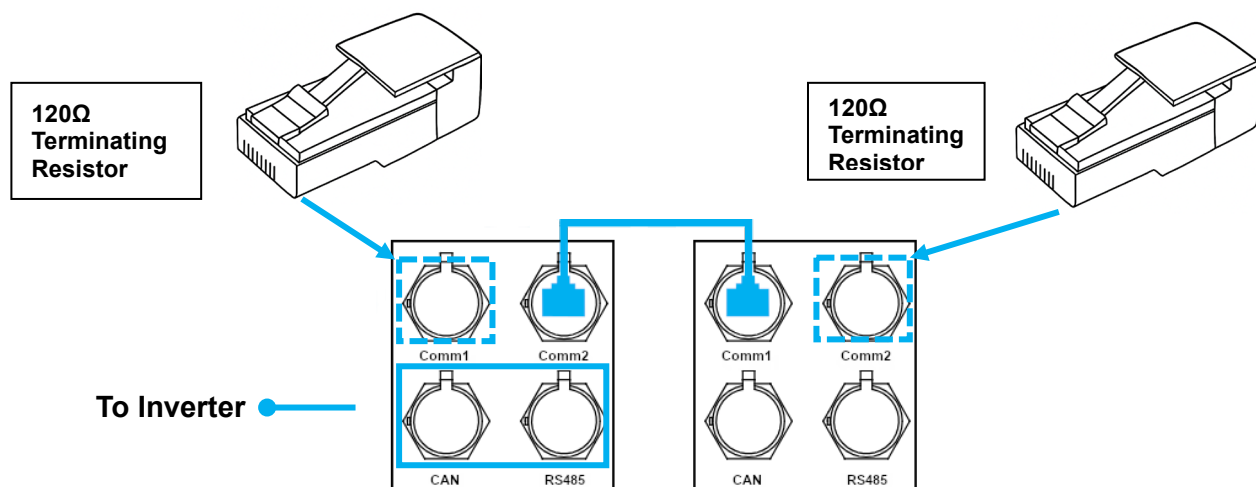


Figure 11.1 - WallMounts in Parallel



WARNING

Do not put EG4® batteries in series! The BMS and internal components are not designed to handle this setup, which could cause the modules to fail, leading to damage.



NOTE

The master battery will communicate directly with the system via the CAN/RS485 port.

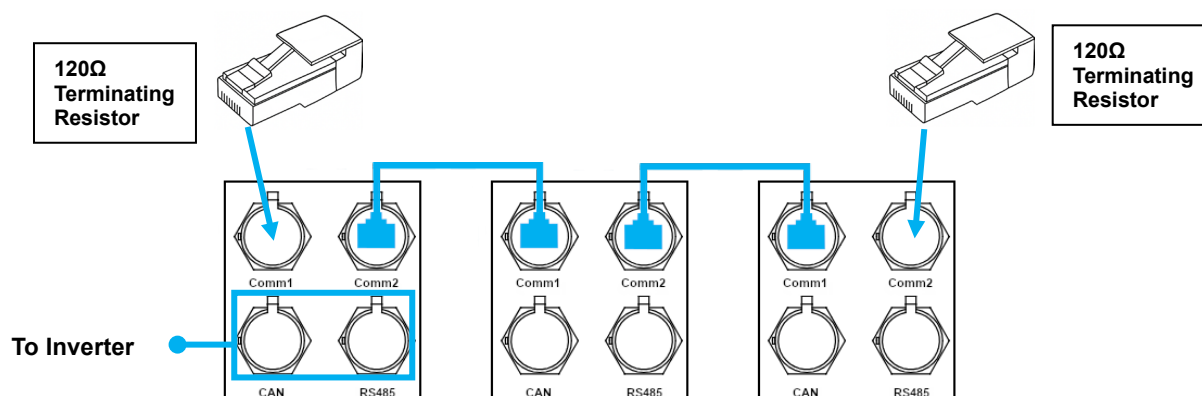


Figure 11.2 - WallMounts in Parallel x 3

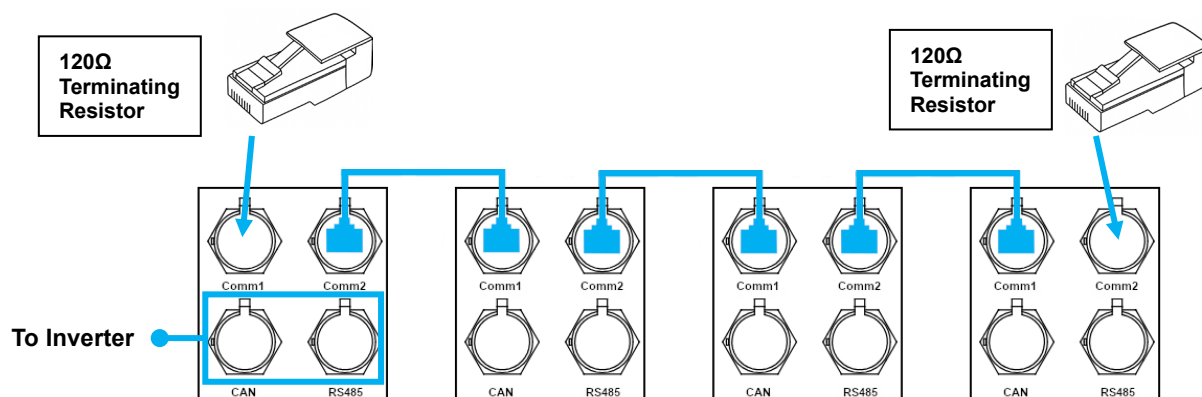


Figure 11.3 - WallMounts in Parallel x 4

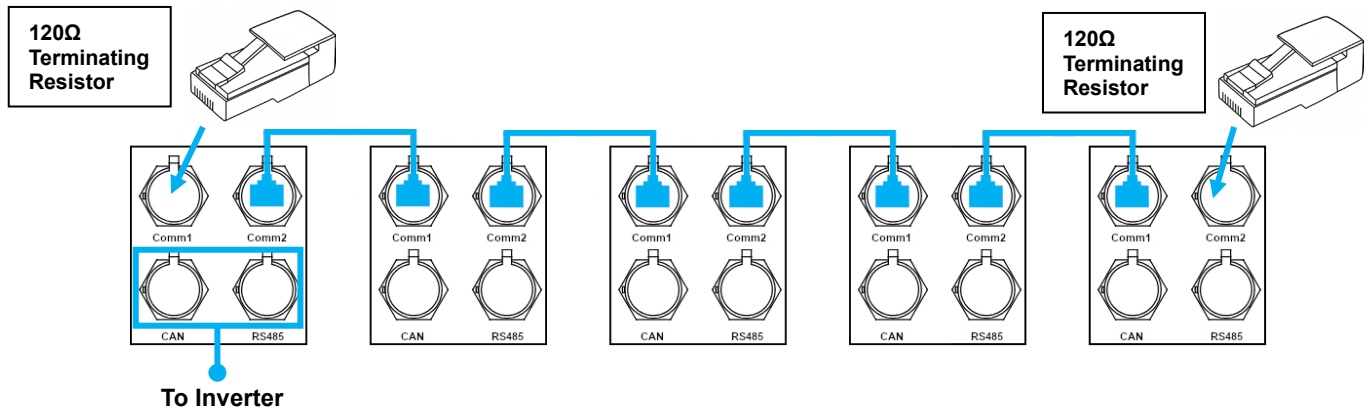


Figure 11.4 - WallMounts in Parallel x 5

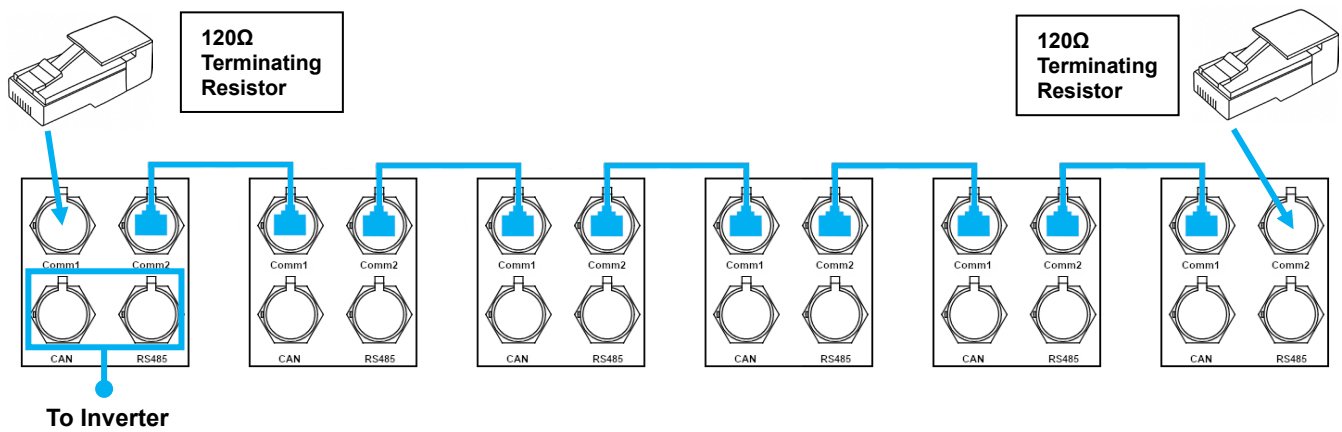


Figure 11.5 - WallMounts in Parallel x 6

11.2 BATTERY CABLE CONNECTIONS


The following battery cable connection diagrams show how to use the internal busbars to connect batteries in parallel and link them to the inverter(s). When using the internal busbars, the system supports up to six batteries connected in parallel, regardless of whether they are connected to one, two, or three EG4® FlexBOSS21 inverters.

Systems that require more than six batteries connected in parallel must use an external fused positive busbar and an unfused negative busbar, each rated for a minimum of 200A per battery. Each fuse must be rated at no more than 250A. Alternatively, larger systems can take advantage of the FlexBOSS18 and FlexBOSS21's ability to draw power from separate battery packs while still paralleling inverters, instead of relying solely on shared external busbars.

NOTE

In the following diagrams, the inverter communications cable connects to the CAN/RS485 port on the FlexBOSS21 inverter, and the units are spaced 4 in. (101.6 mm) apart. Local regulations may require greater minimum battery spacing; verify these requirements with the local AHJ. If the installation requires parallel cables longer than those supplied in the optional paralleling kit, contact the distributor to confirm availability.

Illustrations for representative purposes only.

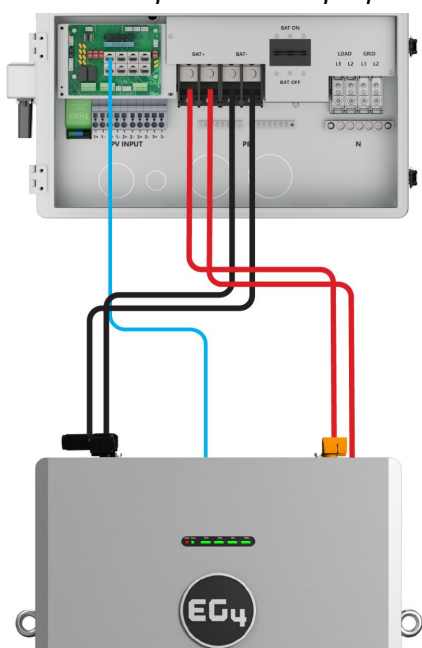

**Figure 11.6 - (1) FlexBOSS21 with
(1) 314 All Weather**

NOTE

To comply with the UL9540 listing for this integrated battery, conduit box, and inverter system, wire the batteries as shown on pages 40 - 46 using the supplied inverter-to- battery cables. *Each additional battery connected in parallel requires a separate paralleling kit, which is sold separately.*

CAUTION

To minimize voltage drop, keep the battery cables at an optimal length. The 53.1 in. cables supplied with the parallel kit are sufficient for daisy chaining the batteries.

Color Code

- – Communication Cable
- – Positive Cable
- – Negative Cable

NOTICE


To comply with UL 9540 safety standards, limit the battery bank capacity to a maximum of 20kWh or to system aggregate limits of 40kWh/80kWh, depending on the installation location. Some Authorities Having Jurisdiction (AHJs) may permit higher capacities based on UL 9540A Large Scale Fire Testing data. The system supports a maximum of six batteries per battery bank.

Before purchasing or installing an energy storage system, verify that the system design complies with all applicable codes and requirements set by the local jurisdiction, fire department, and utility provider.

The manufacturer's installation instructions do not override local codes and regulations, and each jurisdiction may interpret codes and safety standards differently. Engaging local officials early can save time, reduce costs, and help prevent potential issues.

ADDITIONAL SINGLE INVERTER CONFIGURATIONS

Illustrations for representative purposes only.

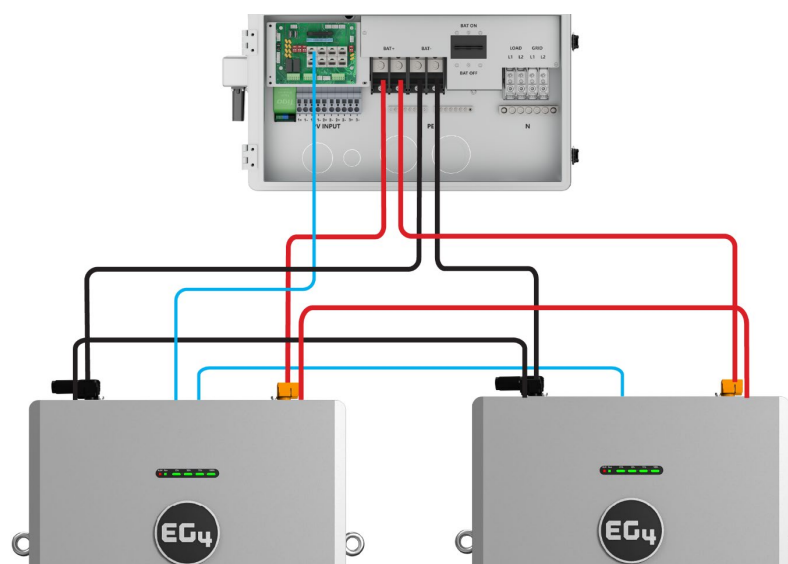

NOTE

Some configurations require additional wiring or connectors to achieve the example layouts. The following diagram does not show the inverter-to-inverter paralleling cables.

Users can achieve other configurations by using external busbars. Consult an electrician or other qualified personnel to design an optional system layout.

While installing batteries without a conduit box, maintain a minimum separation of 4 in. (101.6 mm). When using an EG4® WallMount All Weather conduit box, maintain a battery spacing of 5.35 in. (135.9 mm).

Figure 11.7 - (1) FlexBOSS21 with (2) 314 All Weather

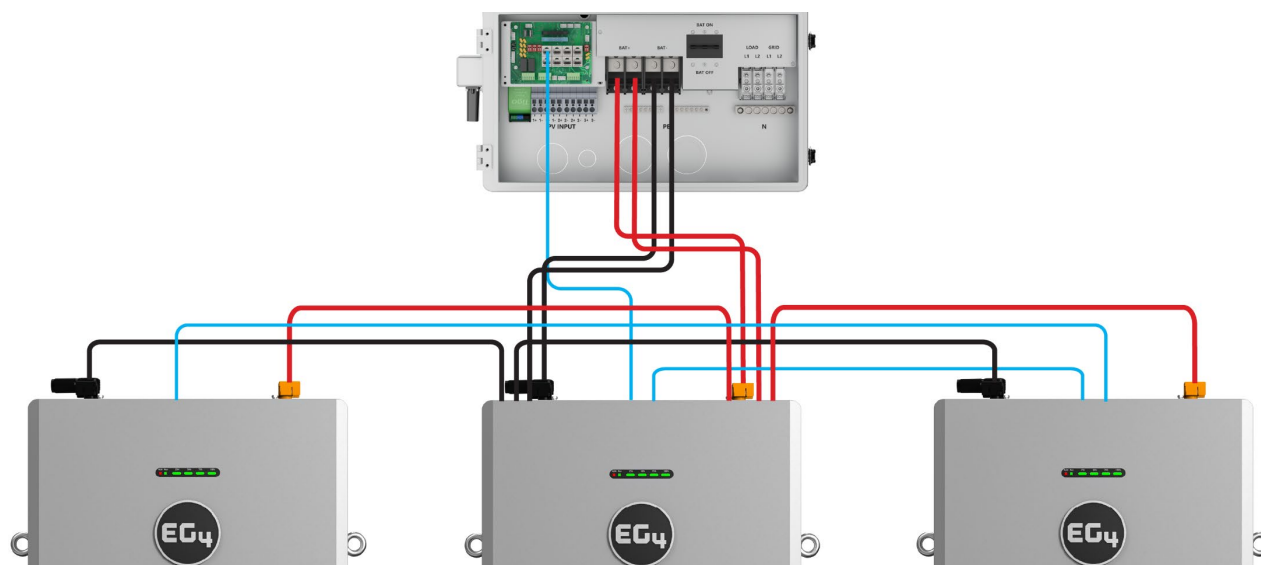


Figure 11.8 - (1) FlexBOSS21 with (3) 314 All Weather

CAUTION

When pairing the EG4® WallMount 314Ah All Weather battery with an inverter, do not exceed >600A load on the master battery, as this exceeds the internal busbar rating.

Illustrations for representative purposes only.

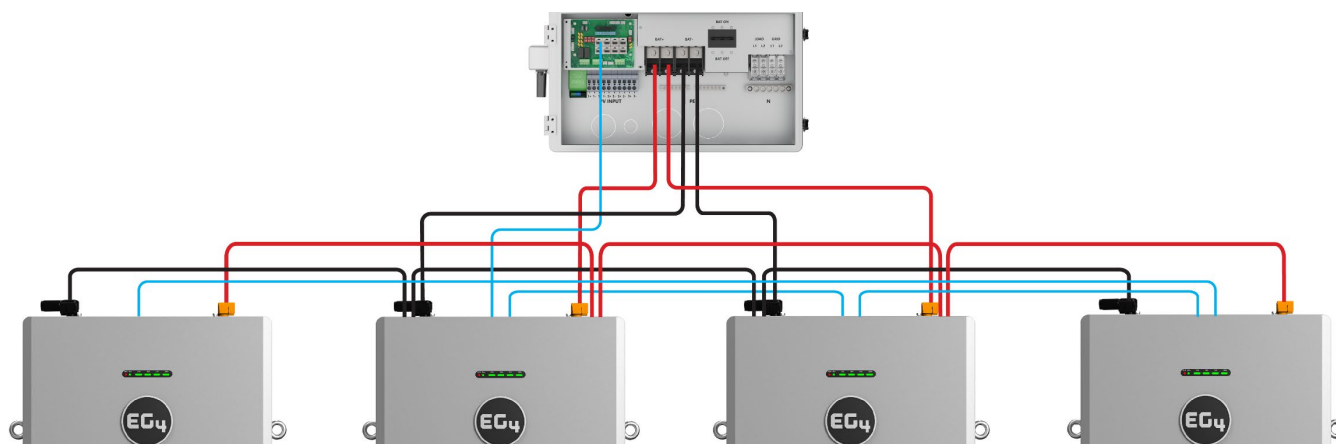


Figure 11.9 - (1) FlexBOSS21 with (4) 314 All Weather

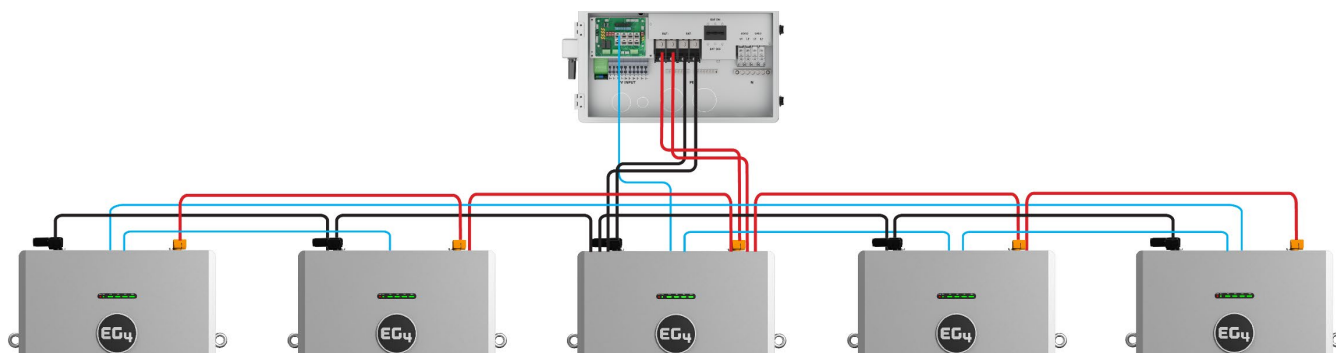


Figure 11.10 - (1) FlexBOSS21 with (5) 314 All Weather

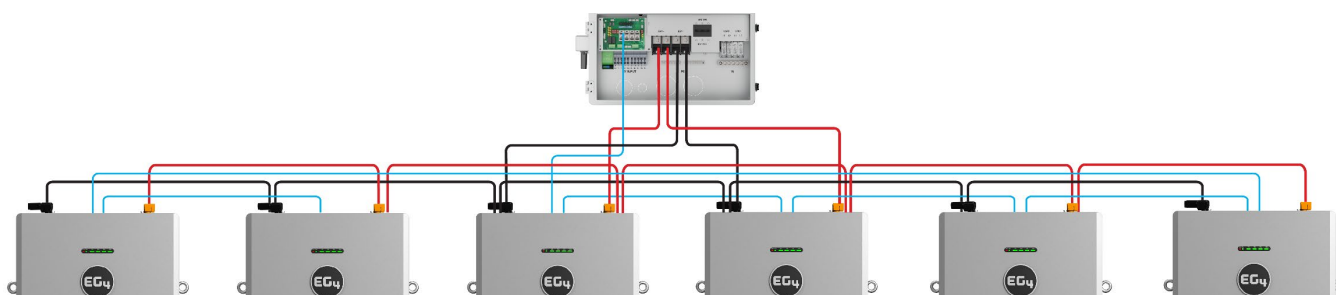


Figure 11.11 - (1) FlexBOSS21 with (6) 314 All Weather



When pairing the EG4® WallMount 314Ah All Weather battery with an inverter, do not exceed >600A load on the master battery, as this exceeds the internal busbar rating.

TWO INVERTER CONFIGURATIONS

Illustrations for representative purposes only.

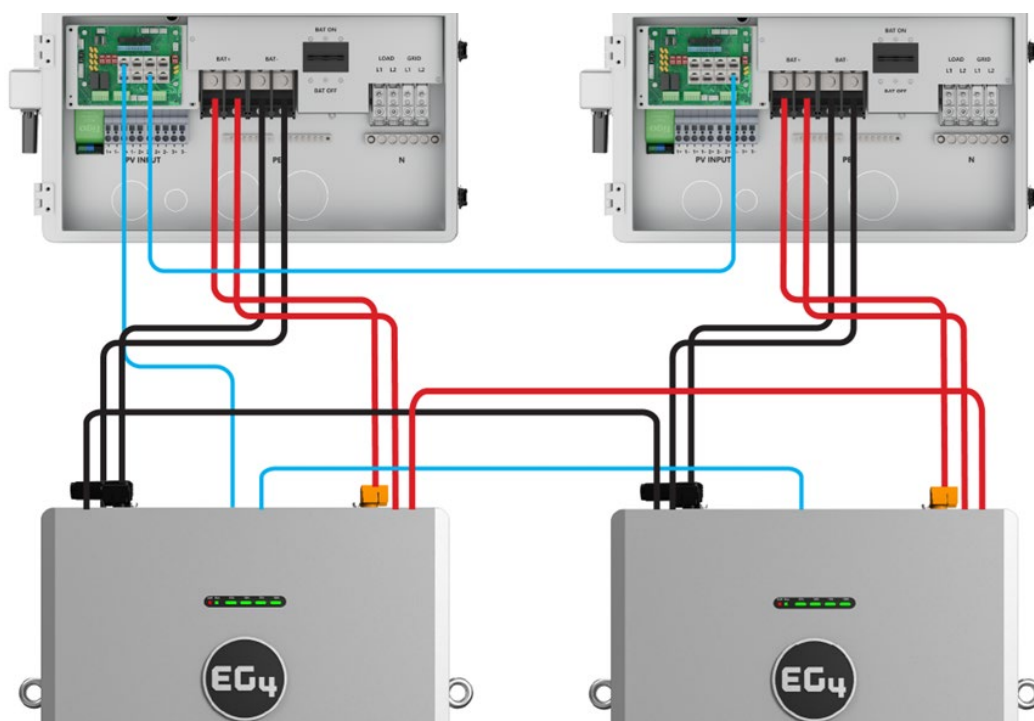


Figure 11.12 - (2) FlexBOSS21 with (2) 314 All Weather

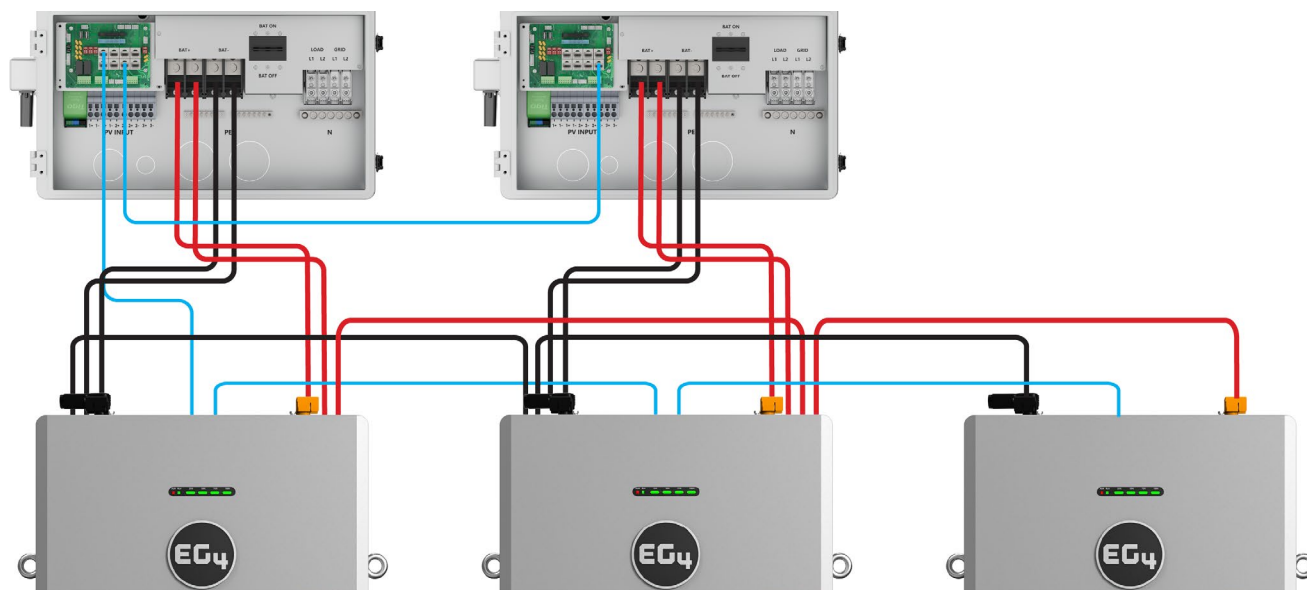


Figure 11.13 - (2) FlexBOSS21 with (3) 314 All Weather



CAUTION

When pairing the EG4® WallMount 314Ah All Weather battery with an inverter, do not exceed >600A load on the master battery, as this exceeds the internal busbar rating.

Illustrations for representative purposes only.

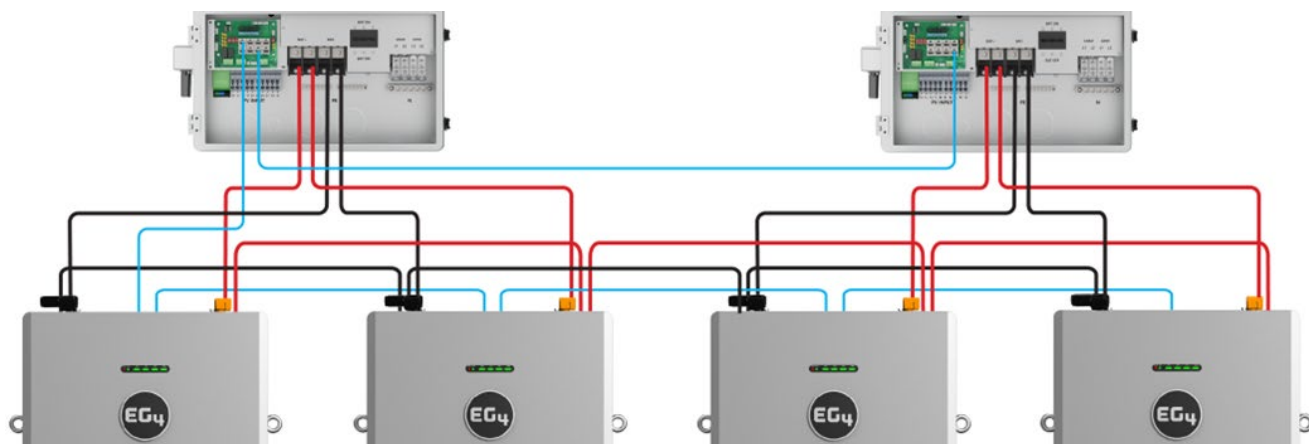


Figure 11.14 - (2) FlexBOSS21 with (4) 314 All Weather

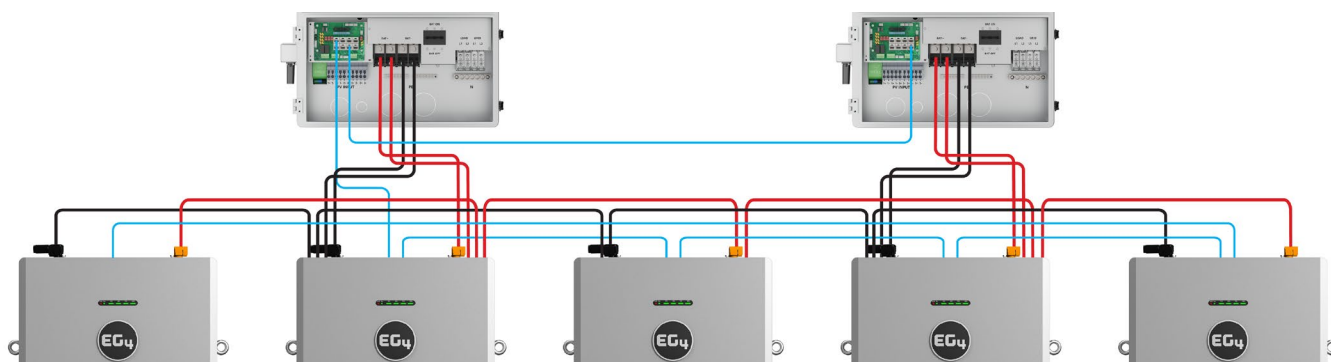


Figure 11.15 - (2) FlexBOSS21 with (5) 314 All Weather

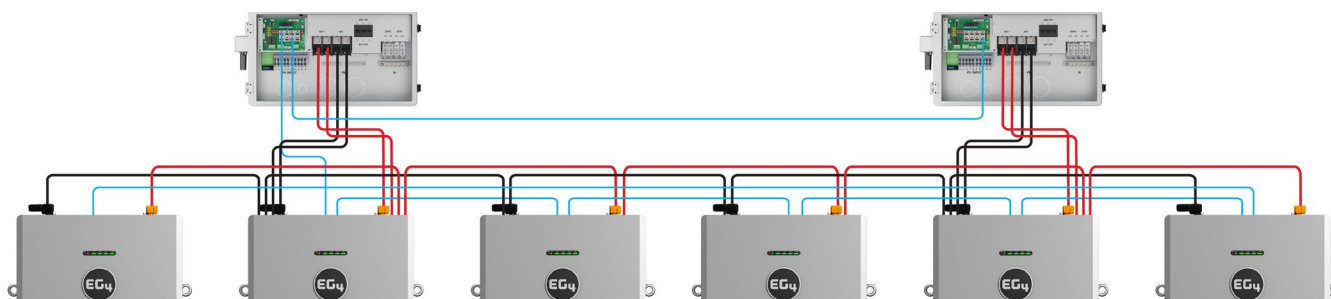


Figure 11.16 - (2) FlexBOSS21 with (6) 314 All Weather



CAUTION

When pairing the EG4® WallMount 314Ah All Weather battery with an inverter, do not exceed >600A load on the master battery, as this exceeds the internal busbar rating.

THREE INVERTER CONFIGURATIONS

Illustrations for representative purposes only.

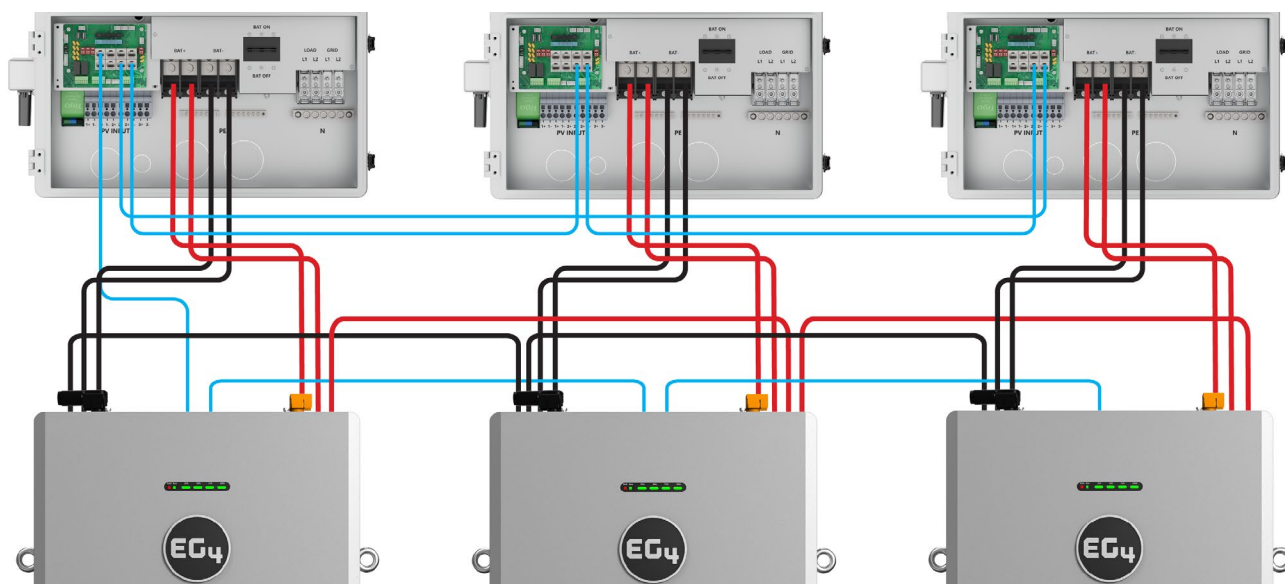


Figure 11.17 - (3) FlexBOSS21 with (3) 314 All Weather

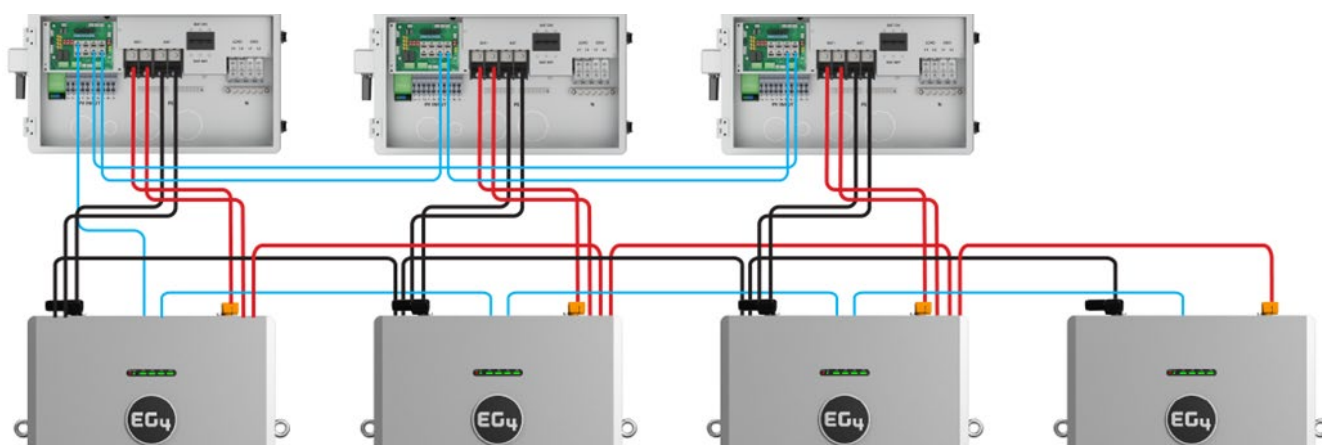


Figure 11.18 - (3) FlexBOSS21 with (4) 314 All Weather

CAUTION

When pairing the EG4® WallMount 314Ah All Weather battery with an inverter, do not exceed >600A load on the master battery, as this exceeds the internal busbar rating.

Illustrations for representative purposes only.

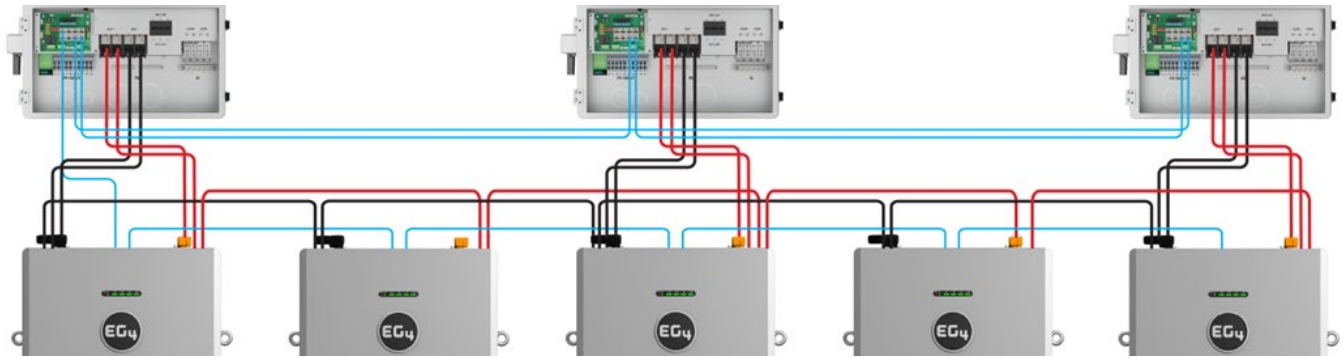


Figure 11.19 - (3) FlexBOSS21 with (5) 314 All Weather

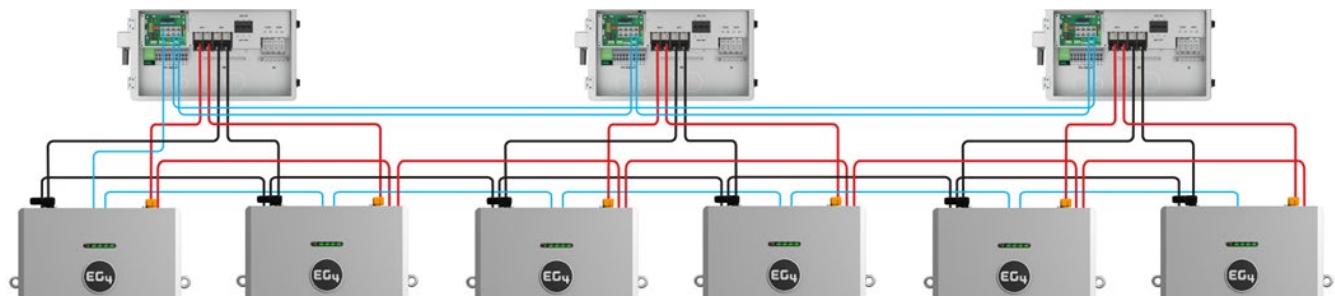


Figure 11.20 - (3) FlexBOSS21 with (6) 314 All Weather

⚠ CAUTION

When pairing the EG4® WallMount 314Ah All Weather battery with an inverter, do not exceed >600A load on the master battery, as this exceeds the internal busbar rating.

12. BATTERY COMMUNICATIONS

Each EG4® battery communicates seamlessly with the inverter, allowing the user to easily monitor and control the system. Advanced communication protocols enable real-time data exchange, providing critical information on battery performance, state of charge, and overall system status.

12.1 AUTO-ID BMS PROTOCOL FEATURE

The EG4® WallMount 314Ah All Weather Battery eliminates the need for manual DIP switch configuration and protocol selection. The Auto-ID feature automatically detects the correct inverter communication protocol and assigns unique battery IDs to enable seamless communication in multi-battery systems.

Auto-ID performs two primary functions: protocol detection and battery ID assignment. When the master battery powers on and connects to the system, the BMS scans for inverter communication signals and automatically selects the appropriate protocol. For example, when paired with the EG4 FlexBOSS21 inverter, the BMS automatically selects the EG4/Lux protocol without requiring any user configuration.

At the same time, the system assigns the first battery as ID 1 (master). Each additional Auto-ID battery added to the chain automatically receives a unique ID in the correct sequence. As a result, installers no longer need to manually designate a master unit or configure individual batteries, because the BMS manages the entire process internally. The Auto-ID BMS protocol is available only on EG4 batteries that do not include DIP switches. Scan the QR code below for more information about Auto-ID BMS protocol features.



12.2 BMS AUTO-ID PROCEDURE

To ensure proper communication between batteries and inverter before introducing power to the system, perform the steps below.



NOTE

The 120Ω terminating resistor establishes closed-loop communication between batteries. The inverters listed in Section 12.3 support closed-loop communication with the battery.

1. Place all battery breakers in the parallel battery bank in the OFF position.
2. Verify that all physical connections are secure and correctly installed according to the communication wiring diagrams in Section 11.1.
3. Install a 120Ω terminating resistor in Comm1 on the master battery and in Comm2 on the last battery in the parallel battery bank.
4. Press the BMS On/Off button to power on the master battery. The Auto-ID process begins and typically completes within 3 – 5 seconds as the master battery assigns IDs to the slave batteries.
5. Power on each remaining battery one at a time at approximately 5-second intervals by pressing the BMS On/Off button, starting with the battery immediately after the master and continuing down the chain.
6. Confirm that all batteries have been automatically assigned IDs. Verify that no faults or protection events are active on any battery or inverter after startup.

12.3 COMMUNICATION CABLE PINOUT

EG4® batteries interface with an inverter by designating a master battery (ID 1). The Auto-ID feature automatically assigns the first battery connected to the CAN port as the master battery with ID 1. Available battery ID numbers range from 1 – 32. The battery connects directly to the inverter using a CAT 5, CAT 5e, or CAT 6 cable wired to pins 1-5 on the inverter side. For closed-loop CAN bus communication with non-EG4 inverters, refer to the inverter manufacturer's documentation for compatibility and configuration requirements.

Communication Cable Pinout & Table*



Table 12.1 – Communication Cable Pinout

PIN	DESCRIPTION
1	RS485-B
2	RS485-A
3	CAN Ground (optional)
4	CAN High
5	CAN Low

***Pinouts are for battery side; please refer to the inverter user manual for pinout configuration on system end.**

Figure 12.1 - Communication Cable Pinout

RS485 COMMUNICATION COMPATIBLE INVERTERS:

- EG4
- Growatt
- Schneider
- Voltronic

CAN COMMUNICATION COMPATIBLE INVERTERS:

- EG4
- Growatt
- Deye
- Megarevo
- Luxpower
- Victron
- Solis
- SMA

13. BATTERY STARTUP AND SHUTDOWN PROCEDURE

The battery includes pre-charge resistors that control the startup sequence and supply power to the inverter. In 51.2 V nominal voltage systems, these pre-charge resistors are essential for limiting inrush current drawn by the inverter during startup.

13.1 STARTUP

After completing all physical connections and confirming that the inverter is ready to accept battery power, follow the steps below:

1. Close (turn on) the battery's circuit breaker.
2. Wait approximately 5 seconds, then power on the battery BMS by pressing the power button on the side of the unit.



NOTE

When using multiple batteries in parallel, repeat the steps listed above per battery, always starting with the master battery.

13.2 SHUTDOWN

1. Power off the battery's BMS by pressing the power button on the side of the unit.
2. Open (turn off) the battery's circuit breaker.



NOTE

When using multiple batteries in parallel, repeat the steps listed above per battery, always starting with the master battery.

14. EMERGENCY STOP (RSD/ESS DISCONNECT)

An optional ESS disconnect allows the user to shut down all batteries and inverters (if equipped) with the push of a button and can integrate with an RSD PV shutdown initiator. When paralleling multiple batteries, connect the ESS disconnect only to the master battery. This integrated safety feature interfaces with the battery through the open 8-pin Dry contact connector using pins 7 and 8 on the top of the battery, via the supplied dry contact cable. If the inverter supports rapid shutdown (RSD), the inverter's emergency stop function can initiate this shutdown when the system is properly wired and operating in closed-loop communication. Verify compliance with local AHJ requirements and applicable NEC codes.



NOTE

When the inverter and the WallMount 314Ah All Weather battery operate in closed-loop communication, certain inverter models can initiate a complete system shutdown including the batteries by activating the inverter's rapid shutdown (RSD) function. In this configuration, the system does not use the dry contact cable to activate the ESS shutdown. When supported, the EG4 inverter controls this function. Refer to the inverter user manual for specific details and compatibility.

Verify that the installation complies with all applicable RSD and ESS standards and requirements established by the National Electrical Code (NEC), the local jurisdiction, the fire department, and the utility provider.

14.1 CABLING




NOTE

Each loose wire end of the provided 8-pin dry contact cable is labeled for identification.

RSD DISABLED (DEFAULT STATE)	
Normally Open (B/A)	Open
Normally Closed (B/A)	Closed
12V+/GND	No Voltage

When the RSD is *enabled* by an external (Normally Open) Emergency Stop Disconnect, all of the following contacts will change state to the table provided below.

RSD ENABLED	
Normally Open (B/A)	Closed
Normally Closed (B/A)	Open
12V+/GND	12V present

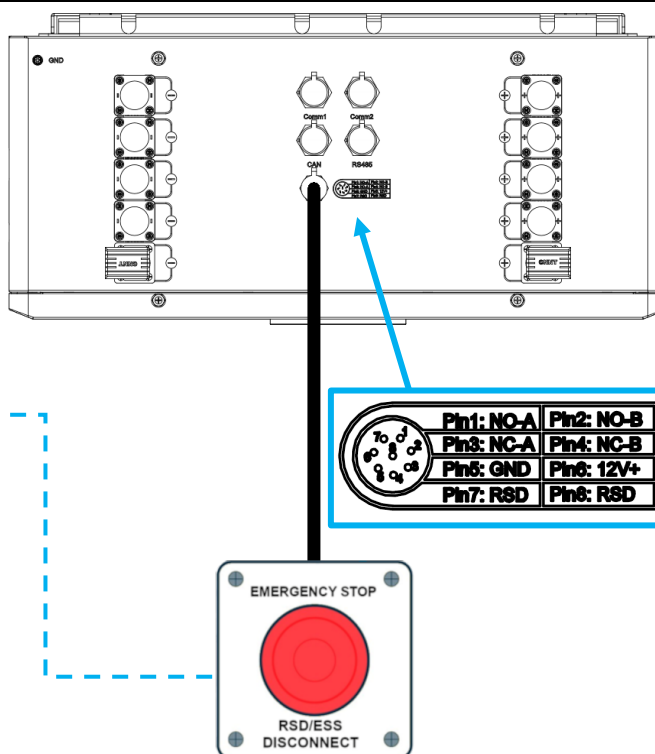

To inverter, RSD Initiator, or ESS Disconnect
(E-Stop recommended if compatible with inverter's RSD system)
Use Normally Open (NO) or Normally Closed (NC) contacts depending on

Figure 14.1 - Emergency Stop Cabling

15. BMS TOOLS

15.1 OVERVIEW

The BMS Tools PC software provides real-time battery analysis and diagnostic information. The battery cannot communicate with BMS Tools and a closed-loop inverter simultaneously.

15.2 DOWNLOADING AND INSTALLING BMS TOOLS

Visit <https://eg4electronics.com/resources/downloads> to download the latest version of the software. After downloading the file, unzip the .zip archive. Then refer to the included PDF for step-by-step instructions on installing and using BMS Tools.

For instructions on how to interface with BMS Tools, please scan the QR code below.



BMS Tools White Sheet

16. TROUBLESHOOTING, MAINTENANCE & DISPOSAL

ALARM DESCRIPTION AND TROUBLESHOOTING

When the ALM indicator on the battery control panel illuminates, the battery has triggered an alarm or entered a protective state to prevent potential damage. Identify the cause of the alarm or fault using the app or BMS Tools, and take appropriate corrective action or visit the battery site to troubleshoot as needed.

Battery LED alarms are shown in the tables below:

16.1 LED INDICATOR STATUS AND DEFINITION

Table 16.1 – LED Indicator Status and Definition

STATUS	NORMAL/ ALARM/ PROTECTION	RUN	ALM	SOC INDICATOR LED	NOTES
				SOC1~SOC4	
Shutdown/ Sleep		OFF	OFF	OFF	
Stand-by	Normal	ON	OFF	Based on battery indicator (Each LED indicates 25% SOC)	
Charge	Normal	Flash 1	OFF		
	Alarm	Flash 1	Flash 1		
	End-off Voltage	ON	OFF		
	Over-Temp Protection	OFF	ON		
	Over-current Transfer Limit Protection	Flash 1	Flash 3/OFF		Over-current flash 3, limit current OFF
Discharge	Normal	Flash 2	OFF	Based on the SOC indicator	
	Alarm	Flash 2	Flash 3		
	End-off Voltage	OFF	OFF		Go to sleep
	Over-Temp/ Over-current Protection	OFF	ON		

The following bullets further define the values in the table above:

- **SOC:** Every light represents ~25% capacity
- **Shutdown:** All LED lights are off
- **Power on:** RUN light is always on
- **System failure:** ALM light is always on
- **Flash 1:** Flash once every second
- **Flash 2:** Flash once every 1.5 seconds
- **Flash 3:** Flash once every 2 seconds

WARNING DEFINITIONS AND SOLUTIONS

Table 16.2 – Warning Definitions and Solutions

STATE	TYPE	INDICATOR	SOLUTION
Charge	Over current protection	ALM	Stop charge, check the settings and limitation
	Temperature protection	ALM	Stop charge, wait for the temp to recover
Discharge	Over current protection	ALM	Stop discharge, check if there is an overload
	Temperature protection	ALM	Stop discharge, wait for the temp to recover



WARNING

The Historical Record tab shows events that occurred before the module entered a warning or protection state. Export this data as a text (.txt) file to provide the distributor with additional information for troubleshooting assistance.

If any warnings or faults from both tables persist, contact the distributor for additional troubleshooting steps.

FAULT DEFINITIONS AND SOLUTIONS

Table 16.3 – Fault Definitions and Solutions

NO.	FAULT	ANALYSIS	SOLUTION
1	Inverter communication failure	Check communication port connection, and battery ID setting.	Check the communication wiring and restart the BMS. See section 11.1 for wiring information.
2	No DC output	Open breaker, or battery voltage is too low.	Close the battery breaker or charge the battery.
3	Power supply unstable	Battery capacity is not at full power.	Check for proper battery cable connection.
4	Battery cannot be fully charged	DC output voltage is below the minimum charge voltage.	Check charging settings on the inverter to confirm that they match battery requirements.
5	ALM LED always on	Short circuit	Disconnect the power cable and check all cables.
6	Battery output voltage is unstable	Battery management system is not operating normally.	Press the reset button to reset the battery, then reboot the system.
7	ALM LED flashes 20 times with SOC1 LED on	Unbalanced voltage within a cell.	Deep discharge the battery bank (<20% SOC), then fully charge the battery bank.
8	ALM LED flashes 20 times with SOC2 LED on	Unbalanced temperature.	Double check the temperature of the battery. If the temperature range is good, restart the battery. If the issue persists, contact the distributor.
9	ALM LED flashes 20 times with SOC3/SOC4 LED on	Battery management system is damaged.	Contact the distributor.
10	Different SOC value of batteries in parallel operation	No issue.	Deep discharge the battery bank (<20% SOC), then fully charge the battery bank.
11	Low voltage protection with no LED on	BMS is in low voltage protection and is in sleep mode.	Fully charge and restart the battery. If issue persists, contact the distributor.
12	Deep discharged with no LED on	Battery voltage is too low to start the BMS	Apply a low charge to the battery until the BMS is able to start up. If the issue persists, contact the distributor.

16.2 MAINTENANCE

Table 16.4 – Maintenance

ITEM	MAINTENANCE INTERVAL	MAINTENANCE SOLUTION
Power Cables	Every 6 months	1. Inspect the power cable for signs of mechanical damage and verify that the terminal insulation sleeves are intact. If users find any damage, power off the battery and perform maintenance or replace the cable. 2. Check the power cable for looseness. If the cable shows any looseness, replace it. 3. Inspect the system for loose screws. Tighten any loose screws using a Phillips head screwdriver.
Communication Cables	Every 12 months	1. Check that the terminals on the parallel communication cable are securely tightened. If a terminal is loose, retighten it. 2. Inspect the communication cable for visible discoloration. If discoloration is present, shut down the battery and replace the communication cable. Refer to Section 11 for additional information.
System Status	Every 6 months	1. Verify that all operating parameters such as system voltage, current, and temperature remain within normal ranges while the system is running. 2. Verify that all primary system components, including system switches and contactors, operate correctly.
Charge & Discharge	Every 6 months	Perform a light load, shallow charge and discharge test to evaluate the battery's SOC and SOH status using the EG4 monitoring site to review the parameters. Limit the depth of discharge and charge/discharge power to no more than 20% of the rated value.

16.3 FIRMWARE UPDATE

Verify all system components are fully up to date before commissioning the system. Navigate to the EG4® WallMount 314Ah All Weather battery product page by using the QR code below to find the latest downloads for the battery. A PDF walkthrough will be included in the downloaded .zip file. If encountering difficulties during the updating process, contact the distributor for more information.



16.4 BATTERY END OF LIFE

The EG4® WallMount 314Ah All Weather Battery delivers a service life of **more than 15 years** when used as intended, based on no more than one charge-discharge cycle per day. The battery maintains its ability to hold a charge through thousands of cycles. When the battery reaches the end of its service life, consider the following points before disposal or replacement.

Lithium iron phosphate (LFP) batteries qualify as hazardous material and require proper disposal; do not place them in household trash. Many recycling organizations and programs accept these batteries at little to no cost. Because disposal options vary by location, search online for “Lithium Battery Disposal Near Me” to find qualified facilities that can safely recycle LFP batteries.

Call the facility in advance to confirm that it is open and currently accepting materials.

If a suitable disposal location is not available, contact EG4 customer service for assistance. Do not discard the battery or dispose of it improperly.

17. WARRANTY INFORMATION

To register the warranty for EG4® Electronics products, visit <https://eg4electronics.com/warranty/> and select the appropriate product to begin the registration process.

NOTES

[illegible]

EG4

ELECTRONICS

support@eg4electronics.com
(903) 609-1988
www.eg4electronics.com